

Valore Polka Wireless Keyboard (AC66)

VALORE

Thank you for purchasing the Valore Polka Wireless Keyboard (AC66).

- Turn your Bluetooth-enabled phone or tablet into a laptop
- Precision typing with unique and fun keycaps
- Keeps desk clear of cable clutter

Important: Please read the user manual thoroughly before using your Selfie Stick.

Specifications:

- Wireless distance: Up to 10m
- Battery type: 2 x AAA battery (not included)
- Key force: 60±15gf
- Key lifespan: 6 million
- Operating system: Android / Windows XP / Windows Vista / Windows 7
Windows 8 / Windows 10 / Mac OS 9.1 above Mac 10.2 above
- Dimensions (L x W x H): 345.5 x 134.5 x 37.5mm
- Material: ABS
- Weight: 540g

UNDERSTANDING THE PRODUCT



- ① Bluetooth connect button
- ② Indicators

START USING WIRELESS KEYBOARD

1) Install batteries

- a) Remove cover from battery compartment
- b) Insert batteries as shown inside
- c) Replace cover

2) How to connect

- a) Right-click on the Bluetooth icon in the windows taskbar, select "Add a Bluetooth device"
- b) Tick the "My device is setup and ready to be found" then click "Next"
- c) Press and hold "ESC + K" on the keyboard for about 5 seconds
- d) Select the keyboard (AC66) from the list of found devices and click "Next" to continue
- e) Click "Finish"

3) Keyboard functions

System Keys	FN+E (IOS)	FN+Q (Android)	FN+W (Windows)
Esc	Main Page	Main Page	Esc
F1	Clip	Clip	F1
F2	Copy	Copy	F2
F3	Stick	Stick	F3
F4	Language shift	Language shift	F4
F5	Search	Search	F5
F6	Previous Track	Previous Track	F6
F7	Play/Pause	Play/Pause	F7
F8	Next Track	Next Track	F8
F9	Mute	Mute	F9
F10	Volume Down	Volume Down	F10
F11	Volume Up	Volume Up	F11
F12	Lock screen	Lock screen	F12

TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at v.info@valore.sg.
- For Warranty Registration, visit www.valore.sg.

Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the product in a high temperature environment.
- Do not place the product near a fire or other excessively hot environments.
- Do not expose the product to moisture or submerge it in liquid. Keep product dry at all times.
- Do not attempt to charge the product using any other method or connection other than the product's provided charging cable.
- Do not disassemble this product or attempt to repair or modify it in any manner.
- Battery usage by children should be supervised
- Be cautious of excessive drops, bumps, abrasions or other impacts to this product. If there is any damage to the product such as dents, punctures, tears, deformities or corrosion, stop using the product and contact us immediately via email at v.info@valore.sg, or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at v.info@valore.sg.

DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes. The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the ("Materials") are the property of their respective owners and may be trademarks or registered trademarks.

Complies with
IMDA Standards
DA102803



Inspired by Valore Singapore

For full range of Valore products visit www.valore.sg