

# Rechargeable Wireless Presenter With Air Mouse Function (AC86)

# VALORE

Thank you for purchasing the Valore Rechargeable Wireless Presenter With Air Mouse Function (AC86).

- Built-in air mouse function allows complete control over your laptop or PC
- Automatically enters standby mode when not in use

**Important:** Please read the user manual thoroughly before using your humidifier.

## Specifications:

- Dimensions (L x W x D): 120 x 33 x 10mm
- Weight: 30g
- Battery type: 300mAh Polymer Lithium
- Material: ABS
- Frequency: 2.4GHz
- Control distance: Up to 100m
- Max output: <math>< 1\text{mW}</math>
- Wavelength: 650nm
- Laser distance: >200m
- Working voltage: 3.6V-4.2V

 
## Package Contents:

- Rechargeable wireless presenter x 1
- USB receiver x 1
- USB cable (600mm) x 1

## USB receiver

- USB version: USB1.1/2.0/3.0
- Working voltage: 4.5V~5.5V DC

## UNDERSTANDING THE PRODUCT

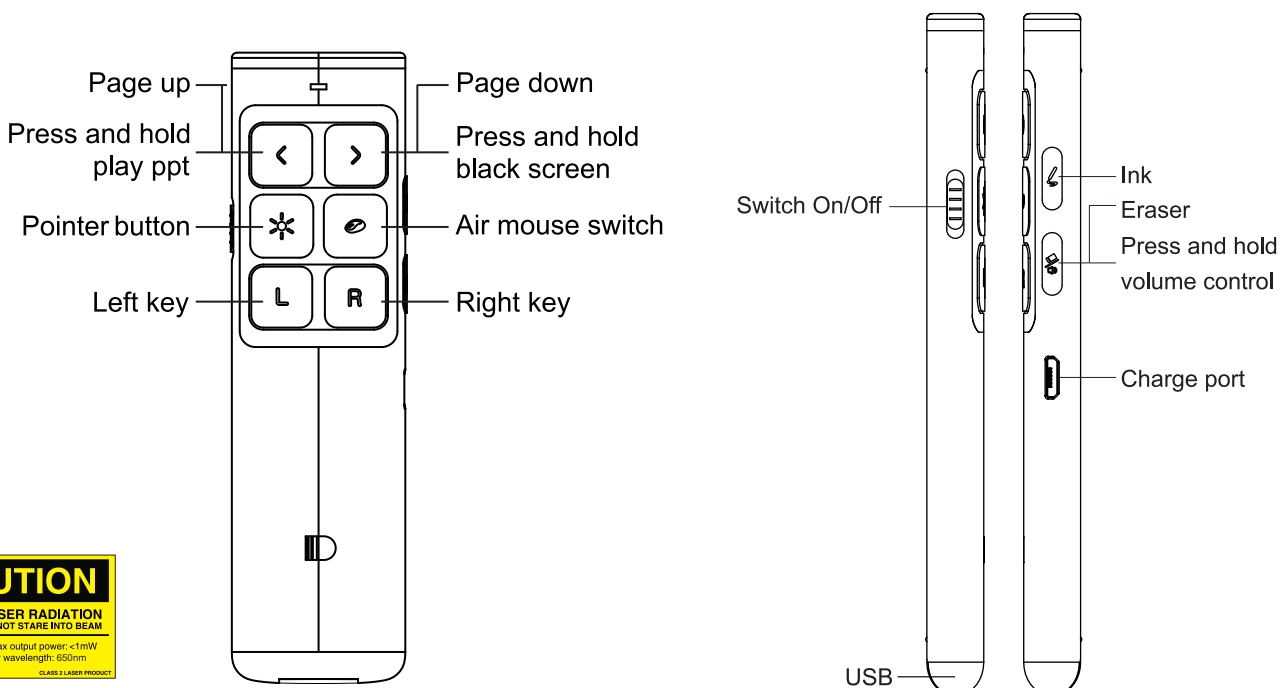

# START USING WIRELESS PRESENTER

## Functions:

### 1) Pointer

Press the Pointer key to emit the beam and highlight the focus.

### 2) Page Up/Page Down

Start power point slide. Press and hold the Page Up button for 2 seconds to display the current page in full screen. Press and hold again to exit full screen display.

In full screen mode, press and hold the Page Down button to enter blank screen mode. Press and hold again to exit blank screen mode.

Click the Page Up or Page Down button to go to previous or next page.

### 3) Air mouse function

Press mouse button to move cursor. Stop moving cursor by pressing the button again.

### 4) Ink function

In full screen status, press and hold ink button, move your hands at the same time to write on screen.

### 5) Erase

Press Eraser button to erase all the ink

### 6) Volume control

 
Press and hold Eraser button, move presenter up or down to control volume.

## Installation


### 1) Take out the USB receiver from the wireless presenter.

Push the power switch to ON position. If the LED is flashing when any button is pressed, the wireless presenter is turned on.

a. Take out the receiver.

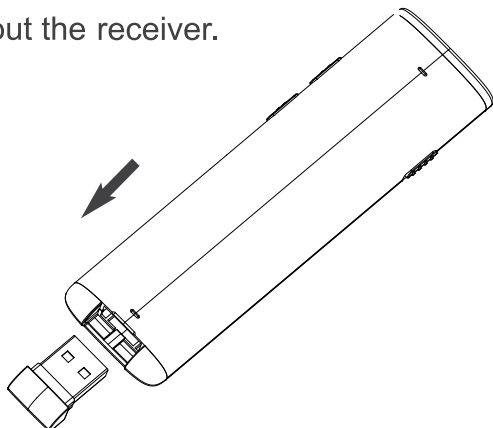

 b. Plug the receiver into the USB port

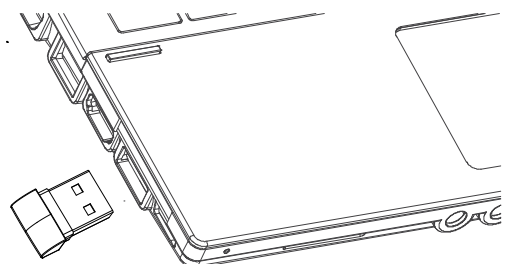

## 2) Recharging the wireless presenter

Connect the wireless presenter to a USB port of laptop or power bank via USB cable, the red LED will stop flashing and keep red to show the wireless presenter is being recharged.

If the red LED turns off, it means the charging is complete.

Charging time will take about 2 hours.



## TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at [v.info@valore.sg](mailto:v.info@valore.sg).
- For Warranty Registration, visit [www.valore.sg](http://www.valore.sg).

### Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the product in a high temperature environment.
- Do not place the product near a fire or other excessively hot environments.
- Do not expose the product to moisture or submerge it in liquid. Keep product dry at all times.
- Do not attempt to charge the product using any other method or connection other than the product's provided charging cable.
- Do not disassemble this product or attempt to repair or modify it in any manner.
- Battery usage by children should be supervised
- Be cautious of excessive drops, bumps, abrasions or other impacts to this product. If there is any damage to the product such as dents, punctures, tears, deformities or corrosion, stop using the product and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg), or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg).

### DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes. The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the ("Materials") are the property of their respective owners and may be trademarks or registered trademarks.

Complies with  
IMDA Standards  
DA102803

Inspired by Valore Singapore

For full range of Valore products visit [www.valore.sg](http://www.valore.sg)