

MIRROR MIND – Multi-functional Wireless Speaker (BTS02)

VALORE

Thank you for purchasing the Valore MIRROR MIND – Multi-functional Wireless Speaker (BTS02).

With its space-saving profile, MIRROR MIND combines a mirror and LED digital alarm clock with a wireless stereo speaker. A welcome addition to any work desk or bedside table.

Important: Please read the user manual thoroughly before using your wireless speaker.

 
 
Specifications:

- Wireless range: Up to 10m
- Built-in battery: 2000mAh 18650 Lithium-ion battery
- Standby time: Up to 150 hours
- Charging time: Up to 4 hours
- Playback time: Up to 8 hours
- Power input: DC5V/1A
- Power output: 5W x 2
- Storage expansion: Micro SD (TF) max 32GB (not included)
- Material: Aluminium + ABS
- Weight: 470g

Package Contents:

- MIRROR MIND – Multi-functional Wireless Speaker
- USB charging cable (800mm)
- Auxiliary cable (800mm)

UNDERSTANDING THE PRODUCT

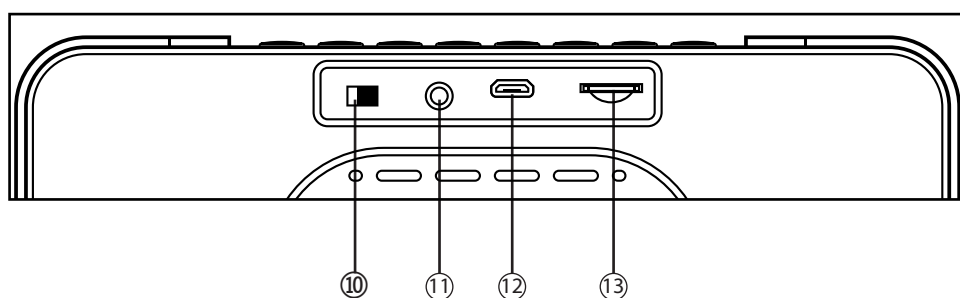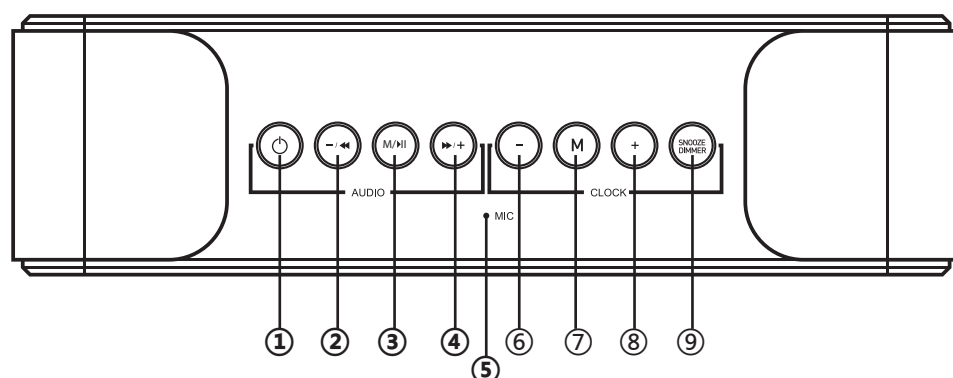


- ① Bluetooth ON/OFF
- ② Previous/Volume '-'
- ③ Play/Pause/Calling
- ④ Next/Volume '+'
- ⑤ Mic
- ⑥ Reducing
- ⑦ Alarm clock mode
- ⑧ Increasing
- ⑨ Snooze/Dimming
- ⑩ ON/OFF switch
- ⑪ AUX
- ⑫ Micro USB charging port
- ⑬ TF card slot

START USING THE WIRELESS SPEAKER

1) Charging the wireless speaker

 Connect the USB charging cable provided to the Micro USB charging port located at the back of the speaker. The red indicator is on while charging, it will turn off after it is fully charged.

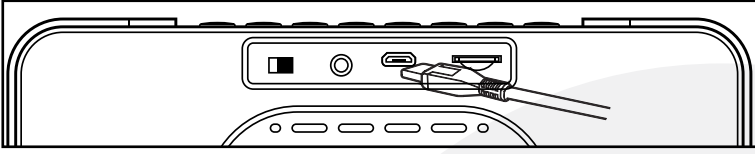

Note: Please charge the speaker for at least 8 hours before first use. Please make sure that the speaker is switched off when charging is in progress.

2) Pairing the wireless speaker (switched off)

Single:

Step 1: Activate Bluetooth function on your mobile device to begin pairing with speaker.

Step 2: Switch on the speaker by shifting the ON/OFF switch to ON.

Step 3: Press and hold the Bluetooth ON/OFF button.

Step 4: Connect to 'Valore BTS02' on your mobile device.

Note: If password is needed, enter 0000. If the pairing is not successful, please turn off wireless speaker first, and then re-pair again. After pairing is successful, paired devices will remember each other. Unless pairing information is deleted because of new pairing, no need to pair when using the next time.

If you want to pair the wireless speaker with other devices, please turn off Bluetooth function of existing source device, and pair the wireless speaker with the new device according to steps 1-4 mentioned above.

3) TF mode

Switch on the speaker and insert the TF card, speaker will automatically enter TF mode. The TF icon will flash slowly while playing music. Remove TF card and the speaker will automatically switch to bluetooth mode.

4) Line in

Insert AUX cable to the line in mode, AUX icon will light up. Remove AUX cable to return to bluetooth mode automatically.

5) Time clock

When time is on display, long press 'M', alarm clock mode, till the hour number flashes to enter time setting. Press 'M' to enter hour, minute setting accordingly, press + or - to adjust the number.

6) 12/24hr setting

When time is on display, long press 'M', alarm clock mode. Short press 'M' till '24hours' icon flashes. Press +/- to switch between 12hr and 24hr setting.

7) Alarm clock

Short press 'M' to switch to Alarm clock 1 mode. Long press 'M' till hour flashes. Press + or - to adjust hour and minute. Press 'M' again to confirm current setting. Set alarm song, circulation mode and alarm on/off after. Long press 'M' till the icon stop flashing.

 
When ☞ lights up, the alarm is switch on everyday.

8) Snooze function

When alarm is ringing, press any button to enter snooze mode, alarm will ring again 10 minutes later. Double click the 'snooze/dimmer' button to cancel snooze. The alarm bell will ring for 2 minutes if no button is pressed.

9) Dimming function

Short press 'snooze/dimmer' to switch between 3 brightness setting. Long press to shut display.

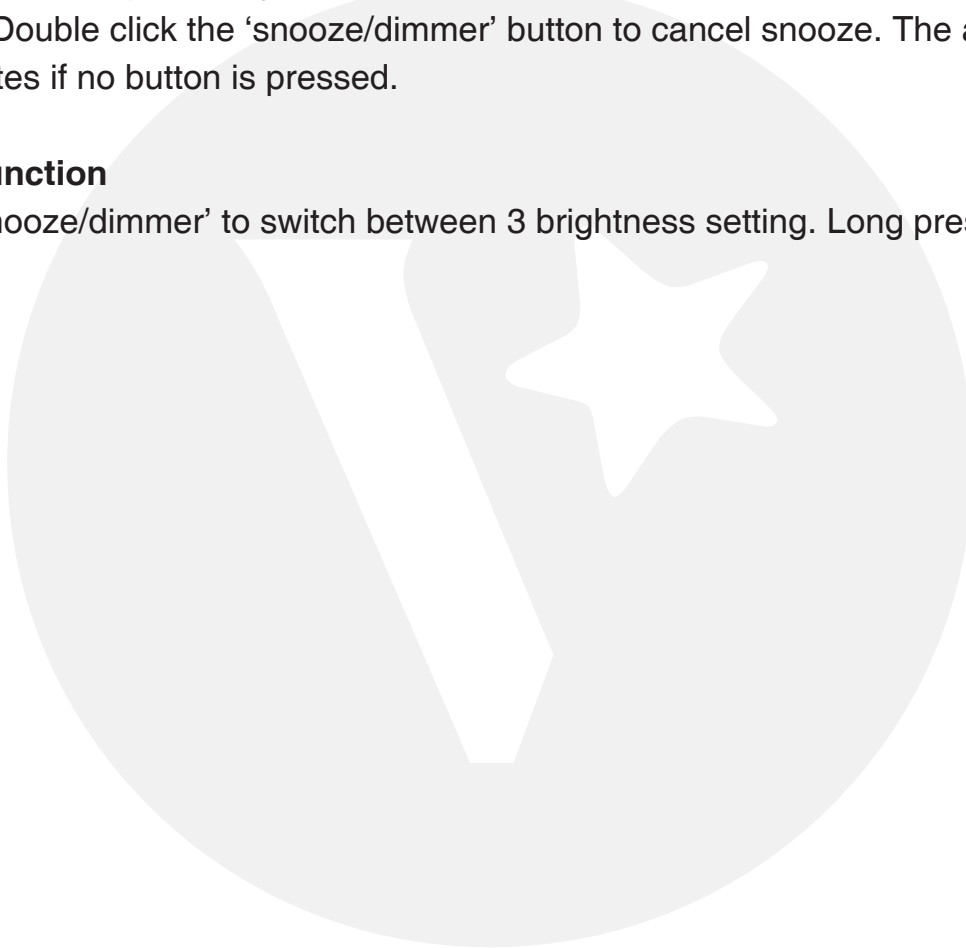

TROUBLESHOOTING

Issue 1: Speaker is unable to connect successfully to your mobile device

Problem 1: Speaker's battery is flat

Solution: Fully charge the speaker (6 hours) and retry connection with your mobile device.

Problem 2: Speaker not paired to your mobile device

Solution: Make sure that the speaker is successfully paired upon selecting 'Valore BTS02' in the device list.

Problem 3: Speaker and mobile device too far apart

Solution: Make sure that the speaker is within a metre range during pairing and connection.

Problem 4: Speaker is connected to other mobile device

Solution: Make sure that the speaker has already been disconnected before making a new connection with a new device.

Issue 2: Sound from the speaker is too soft or silent

Problem 1: Speaker's battery is low / flat

Solution: Fully charge the speaker (6 hours) and retry connection with your mobile device.

Problem 2: Speaker or mobile device's volume is too low

Solution: Turn the volume of the speaker or mobile device up to increase the volume.

Problem 3: Music track may not be audible

Solution: Make sure that the music track is of a playable format for the mobile device.

Problem 4: Speaker and mobile device might not be connected properly.

Solution: Repeat the connection step via Bluetooth again to make sure that it is connected properly and try again.

TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at v.info@valore.sg.
- For Warranty Registration, visit www.valore.sg.

Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the speaker in a high temperature environment.
- Do not place the speaker near a fire or other excessively hot environments.
- Do not expose this speaker to moisture or submerge it in liquid. Keep speaker dry at all times.
- Do not attempt to charge the speaker using any other method or connection other than the headset's provided charging cable.
- Do not disassemble this speaker or attempt to repair or modify it in any manner.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this headset. If there is any damage to the speaker such as dents, punctures, tears, deformities or corrosion, stop using the speaker and contact us immediately via email at v.info@valore.sg, or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at v.info@valore.sg.

DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes.

The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the ("Materials") are the property of their respective owners and may be trademarks or registered trademarks.

Complies with
IMDA Standards
DA103331



Inspired by Valore Singapore

For full range of Valore products visit www.valore.sg