

# Valore Redshank – Outdoor Wireless Speaker (BTS15)

# VALORE

Thank you for purchasing the Valore Redshank – Outdoor Wireless Speaker (BTS15).

- 2600mAh power bank serves as a handy emergency backup
- Mounting bracket included for bike handlebars or railings
- High-quality stereo sound with international standard IPX65 for water-based activities

**Important:** Please read the user manual thoroughly before using your wireless speaker.


## Specifications:

- Wireless range: Up to 10m
- Battery type: 2600mAh Rechargeable Lithium-ion battery
- Supports: Micro SD / Line in
- Standby time: Up to 100 hours
- Charging time: Up to 4 hours
- Playback time: Up to 12 hours
- Power input: DC5V/1A (max)
- Power output: DC5V/1A (max)
- Material: ABS
- Dimensions (L x W X H): 128 x 52 x 65.5mm
- Weight: 329g

## Package Contents:

- Outdoor wireless speaker
- Mounting bracket
- Auxiliary cable (800mm)
- USB charging cable (800mm)

## UNDERSTANDING THE PRODUCT

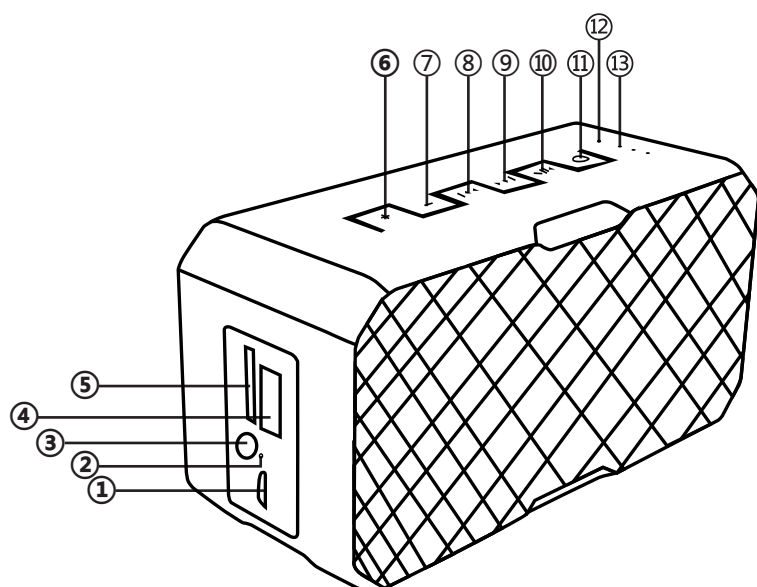


- ① Micro USB charging port
- ② Reset button
- ③ AUX
- ④ USB port
- ⑤ TF card slot
- ⑥ Volume +
- ⑦ Volume -
- ⑧ Next track
- ⑨ Previous track
- ⑩ Play/Pause/Answer
- ⑪ Power button
- ⑫ Mode indicator
- ⑬ Power indicator

# START USING THE WIRELESS SPEAKER

## 1) Charging the wireless speaker

Connect the USB charging cable provided to the Micro USB charging port using a DC 5V output adaptor.

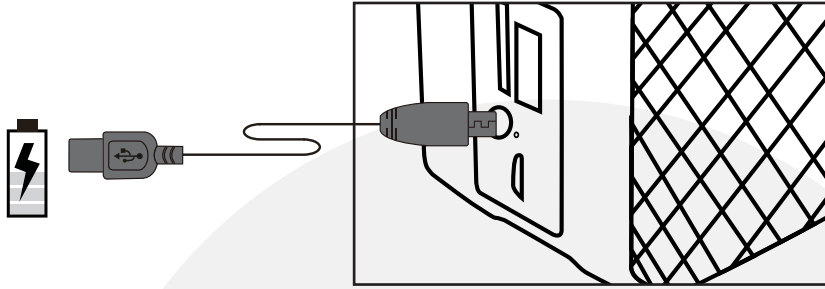

Note: Please charge the speaker for at least 8 hours before first use. Please make sure that the speaker is switched off when charging is in progress.

## 2) Pairing the wireless speaker (switched off)

### Single:

Step 1: Activate Bluetooth function on your mobile device to begin pairing with speaker.

Step 2: Switch on the speaker by pressing Power Button.

Step 3: Connect to the speaker by selecting 'Valore BTS15' under the device list.

Step 4: Once connected, the LED light at the will be solid blue.

Note: If the pairing is not successful, please turn off wireless speaker first, and then re-pair again. After pairing is successful, paired devices will remember each other. Unless pairing information is deleted because of new pairing, no need to pair when using the next time.

If you want to pair the wireless speaker with other devices, please turn off Bluetooth function of existing source device, and pair the wireless speaker with the new device according to steps 1-4 mentioned above.

## 3) Wireless speaker controls

### Volume adjustment:

When playing music or during a phone call on Bluetooth mode, press the "+" or "-" icon to adjust the volume. Volume can also be adjusted on mobile device.

### Track selection, Play/Pause:

When playing music in Bluetooth mode, press the "Previous Track" or "Next Track" icon to jump to previous or next track.

Press "Play/Pause/Answer" once to play or pause music.

### TF card mode:

Place TF card into card slot and speaker will play music files automatically.

**Phone calls:**

When Bluetooth is connected, press “Play/Pause/Answer” to answer or hang up call. Press twice to redial the last incoming call.

**Power Bank:**

Insert USB cable into the USB port of the speaker and connect the other side to the device charging port.

**AUX/Line in:**

Insert the audio cable into the 3.5mm jack of speaker and connect the other side to your laptop / mobile phone / mp3 etc to play music file.

**Reset:**

If the speaker is not working normally, take a thin wire to gently touch the reset button.

**TROUBLESHOOTING****Issue 1: Speaker is unable to connect successfully to your mobile device**

Problem 1: Speaker's battery is flat

Solution: Fully charge the speaker (6 hours) and retry connection with your mobile device.

Problem 2: Speaker not paired to your mobile device

Solution: Make sure that the speaker is successfully paired upon selecting 'Valore BTS15' in the device list.

Problem 3: Speaker and mobile device too far apart

Solution: Make sure that the speaker is within a metre range during pairing and connection.

Problem 4: Speaker is connected to other mobile device

Solution: Make sure that the speaker has already been disconnected before making a new connection with a new device.

**Issue 2: Sound from the speaker is too soft or silent**

Problem 1: Speaker's battery is low / flat

Solution: Fully charge the speaker (6 hours) and retry connection with your mobile device.

Problem 2: Speaker or mobile device's volume is too low

Solution: Turn the volume of the speaker or mobile device up to increase the volume.

Problem 3: Music track may not be audible

Solution: Make sure that the music track is of a playable format for the mobile device.

Problem 4: Speaker and mobile device might not be connected properly.

Solution: Repeat the connection step via Bluetooth again to make sure that it is connected properly and try again.

## TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at [v.info@valore.sg](mailto:v.info@valore.sg).
- For Warranty Registration, visit [www.valore.sg](http://www.valore.sg).

### Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the speaker in a high temperature environment.
- Do not place the speaker near a fire or other excessively hot environments.
- Do not expose this speaker to moisture or submerge it in liquid. Keep speaker dry at all times.
- Do not attempt to charge the speaker using any other method or connection other than the headset's provided charging cable.
- Do not disassemble this speaker or attempt to repair or modify it in any manner.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this headset. If there is any damage to the speaker such as dents, punctures, tears, deformities or corrosion, stop using the speaker and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg), or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg).

### DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes.

The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the ("Materials") are the property of their respective owners and may be trademarks or registered trademarks.

Complies with  
IMDA Standards  
DA102803

Inspired by Valore Singapore

For full range of Valore products visit [www.valore.sg](http://www.valore.sg)