

Wireless Deep Bass On-Ear Headphone (BTS26)

VALORE

Thank you for purchasing the Valore Wireless Deep Bass On-Ear Headphone (BTS26).

- Durable and comfortable earpads
- Just 3 hours of charging for up to 12 hours of playback
- Aeroplane adaptor included for in-flight entertainment system connection

Important: Please read the user manual thoroughly before using your wireless headphone.


Specifications:

- Wireless range: Up to 10m
- Built-in battery: 400mAh Lithium battery
- Standby Time: Up to 120 hours
- Charging time: Approximately 3 hours
- Playback/working time: Up to 12 hours
- Frequency: 2.4-2.48GHz
- Power input: DC5V
- Speaker: 40mm
- Dimensions (L x W x H): 195 x 75 x 170mm (unfold)
120 x 75 x 170mm (fold)

Package Contents:

- Wireless deep bass on-ear headphone x 1
- Storage pouch x 1
- USB charging cable (500mm) x 1
- 3.5mm audio cable (1000mm) x 1
- Aeroplane adaptor x 1

UNDERSTANDING THE PRODUCT

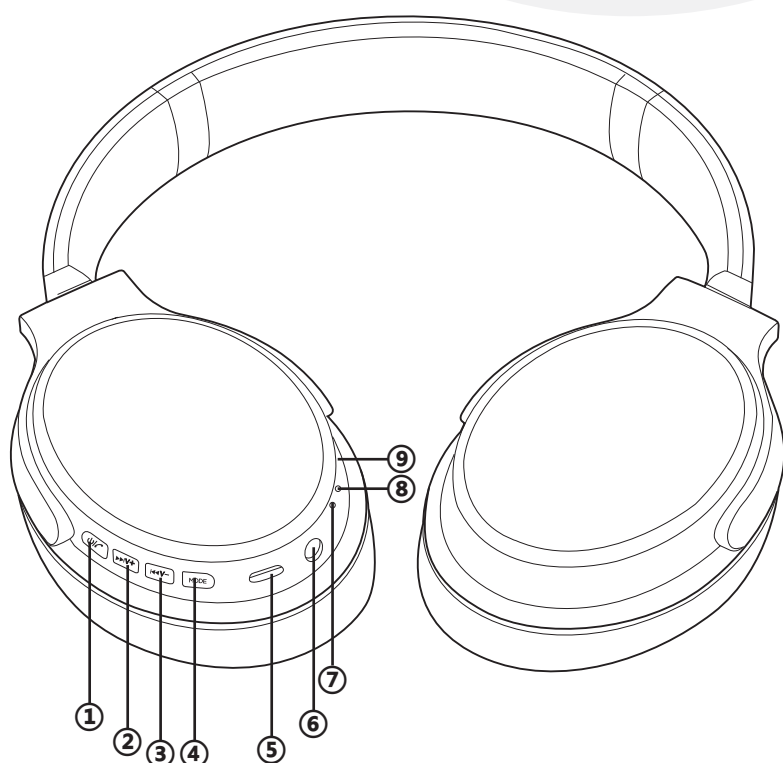

- ① On/Off/Pause/Play/Answer/
Hang up call
- ② Next / Volume '+'
- ③ Previous / Volume '-'
- ④ Mode
- ⑤ Charging port
- ⑥ 3.5mm port
- ⑦ LED indicator
- ⑧ Built-in microphone
- ⑨ TF card slot

START USING THE WIRELESS HEADPHONE.

1) Charging the wireless headphone

- a) Please ensure that the battery is fully charged before using the device for the first time.
- b) Connect the provided USB charging cable to the charging port on the headphone. Connect the other end of the USB charger to a 5V USB wall charger or USB port.
- c) The LED indicator light will display as red colour when charging.
- d) When the headphone is fully charged, the LED indicator will turn off.

2) Pairing the wireless headphone (switched off)

Step 1: Activate Bluetooth function on your mobile device to begin pairing with headphone.

Step 2: Press and hold onto the Multi-functional(ON) button until the LED light flickers red and blue.

Step 3: Connect to the headphone by selecting 'Valore BTS26' under the device list.

Step 4: Once connected, the LED light at the Bluetooth button will blink blue in interval of 5 seconds.

Note: If the pairing is not successful, please turn off wireless headphone first, and then re-pair again. After pairing is successful, paired devices will remember each other. Unless pairing information is deleted because of new pairing, no need to pair when using the next time.

If you want to pair the wireless headphone with other devices, please turn off Bluetooth function of existing source device, and pair the wireless headphone with the new device according to steps 1-4 mentioned above

MP3 Mode

- a) Press and hold the ON button for 3 seconds to turn on the headphone.
- b) Insert Micro SD card. The device will begin reading from the card.
- c) Alternatively, short press the "Mode" button until you have cycled to the MP3 mode.
- d) Control the playback using the controls on the headphone.

AUX-in Mode

- a) Switching headphones on for this mode is not required.
- b) Insert the audio cable into the 3.5mm input on the headphone and other end to device's port.
- c) In this mode, you can only control the playback volume with your playback device and not the volume control on the headphone.

Hands Free Mode

- a) To answer call, press the answer key on your phone or press the "Answer" button on the headphone.
- b) To hang up, press the end key on your phone or press the "Hang up call" button twice on the headphone.
- c) To redial your last call, double click the call button. Music playback will automatically be paused.

TROUBLESHOOTING

Issue 1:headphone is unable to connect successfully to your mobile device

Problem 1: Headphone's battery is flat

Solution: Fully charge the headphone (4 hours) and retry connection with your mobile device.

Problem 2: Headphone not paired to your mobile device

Solution: Make sure that the headphone is successfully paired upon selecting 'Valore BTS26' in the device list.

Problem 3: Headphone and mobile device too far apart

Solution: Make sure that the headphone is within a metre range during pairing and connection.

Problem 4: Headphone is connected to other mobile device

Solution: Make sure that the headphone has already been disconnected before making a new connection with a new device.

Issue 2: Sound from the headphone is too soft or silent

Problem 1: Headphone's battery is low / flat

Solution: Fully charge the headphone (4 hours) and retry connection with your mobile device.

Problem 2: Headphone or mobile device's volume is too low

Solution: Turn the volume of the headphone or mobile device up to increase the volume.

Problem 3: Music track may not be audible

Solution: Make sure that the music track is of a playable format for the mobile device.

Problem 4: Headphone and mobile device might not be connected properly.

Solution: Repeat the connection step via Bluetooth/auxiliary cable again to make sure that it is connected properly and try again.

TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at v.info@valore.sg.
- For Warranty Registration, visit www.valore.sg.

Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the headphone in a high temperature environment.
- Do not place the headphone near a fire or other excessively hot environments.
- Do not expose this headphone to moisture or submerge it in liquid. Keep headphone dry at all times.
- Do not attempt to charge the headphone using any other method or connection other than the headphone's provided charging cable.
- Do not disassemble this headphone or attempt to repair or modify it in any manner.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this headphone. If there is any damage to the headphone such as dents, punctures, tears, deformities or corrosion, stop using the headphone and contact us immediately via email at v.info@valore.sg, or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at v.info@valore.sg.

DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes.

The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the ("Materials") are the property of their respective owners and may be trademarks or registered trademarks.

Complies with
IMDA Standards
DA103331



Inspired by Valore Singapore

For full range of Valore products visit www.valore.sg