

Thank you for purchasing the Valore Wireless Soundbar (BTS30).

- 2 x 10W speaker
- Alarm clock function
- Supports up to 32GB microSD™ card

**Important:** Please read the user manual thoroughly before using your wireless speaker.

 
## Specifications:

- Wireless range: Up to 10m
- Built-in battery: 7.4V 2000mAh Lithium battery
- Charging time: Approximately 5 hours
- Playback/working time: Up to 6 hours
- Standby time: Up to 120 hours
- Power input: DC5V/1A
- Power output: 10W x 2

## Package Contents:

- Wireless soundbar
- USB charging cable (800mm)
- Auxiliary cable (800mm)
- RCA cable (1000mm)

## UNDERSTANDING THE PRODUCT

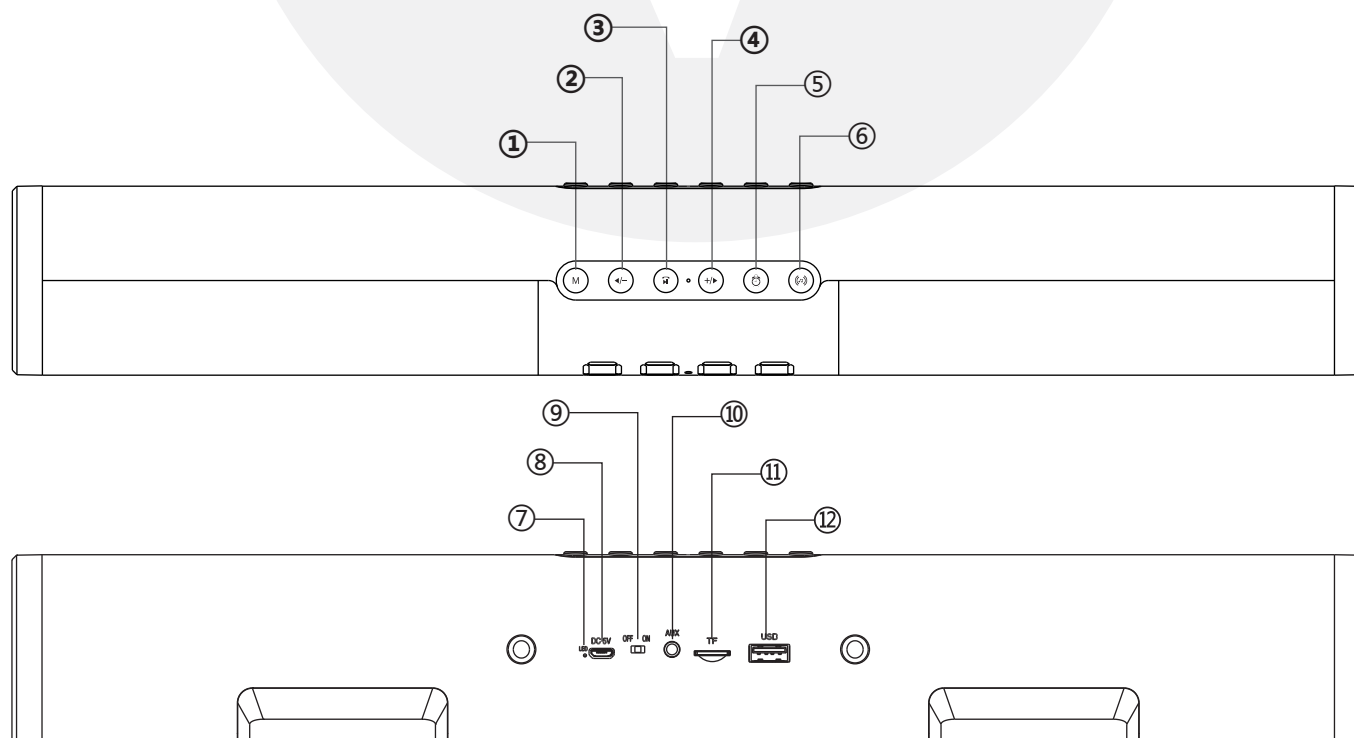

- |                              |                           |
|------------------------------|---------------------------|
| ① Mode                       | ⑦ Charging indicator      |
| ② Previous track/Volume down | ⑧ Micro USB charging port |
| ③ Play/Pause/Phone           | ⑨ On/Off                  |
| ④ Next track/Volume Up       | ⑩ AUX input               |
| ⑤ Clock                      | ⑪ Micro SD card slot      |
| ⑥ EQ                         | ⑫ USB port                |

# START USING THE WIRELESS SOUNDBAR


## Key function brief description

M	Press for 3 seconds: enter / close speaker work mode Press: switch mode
←-	Press for 3 seconds: previous song press: volume -
⏸	Press and hold: press for 3 seconds reject call/ disconnect Bluetooth Press: pause / play; answer call / hang up; Double-click: redial the phone
+▶	Press for 3 seconds: next song press: volume +
🕒	Press for 3 seconds: enter / save settings press: view current time, alarm clock time;switch to next setting Double click: quickly cancel / enable alarm clock
🔇	press for 3 seconds: turn off the screen; turn off the alarm clock for the day Short press: switch sound effects (system default bass)

The Wireless Soundbar is switched on by default clock mode: switch to ON position to turn on, screen display digital, need to manually set the local time at this time (do not have automatic timing function). In all modes of this speaker, the default volume is 4, the maximum is 15, and the alarm volume is 8.

## Power On (Long press)

Press On/Off button located at the back of the speaker to Power On.

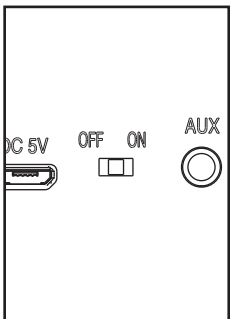

## Pairing the wireless speaker (switched off)

Step 1: Activate Bluetooth function on your mobile device to begin pairing with speaker.

Step 2: Switch on speaker by pressing the On/Off button.

Step 3: Press “M” on speaker to activate Bluetooth.

Step 4: Connect to the speaker by selecting ‘Valore BTS30’ under the device list.

Press “⏸” for 3 seconds to disconnect Bluetooth connection.

Note: If the pairing is not successful, please turn off wireless speaker first, and then re-pair again. After pairing is successful, paired devices will remember each other. Unless pairing information is deleted because of new pairing, no need to pair when using the next time.

If you want to pair the wireless speaker with other devices, please turn off Bluetooth function of existing source device, and pair the wireless speaker with the new device according to steps 1-3 mentioned above.

## Micro SD Card Mode / USB Mode

1. Turn on soundbar, insert Micro SD card/USB. The soundbar automatically enters Micro SD/USB mode.
2. If the Micro SD card/USB is inserted, press “M” twice to enter mode manually.
3. When Micro SD card/USB is remove, the soundbar will enter Bluetooth mode automatically.

## AUX IN mode

1. Turn on soundbar, insert one end of the audio cable into the AUX port and the other line end to mobile or computer, the speaker automatically enters the AUX IN mode.
2. Press “⏸” to mute. Icon will light up when mute.
3. Remove AUX cable, the soundbar will enter Bluetooth mode automatically

## Charging the soundbar


1. Insert the USB charging cable into the soundbar and connect the 5V charger to a wall plug or computer.
2. When charging, the charging indicator is red. When fully charged, red indicator will go off.
3. Power saving mode: Turn on/off the screen display by pressing “(⏸)” for 3 seconds. When the alarm rings, screen automatically lights up.

Note: After full charged, please unplug the charging power. When the power's remaining is at 20%, the power icon will light up. At 15%, it will start to flicker slowly. Then turn off in about 2 minutes. The clock will still continue to work.


When the remaining power is exhausted, all settings of the soundbar will be lost. Please ensure to charge soundbar in time.

## Clock setting

Setting: Under the clock display state, press “🕒” for 3 seconds to enter clock setting. The screen displays the hour digital slow flash. Short press “◀/−” and “+▶” to adjust hours.

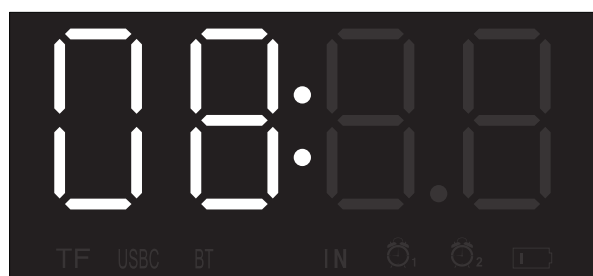

After setting up the hour digital, short press “🕒” again. Screen displays the minutes digital slow flash. Short press the “◀/−” and “+▶” to adjust minutes.

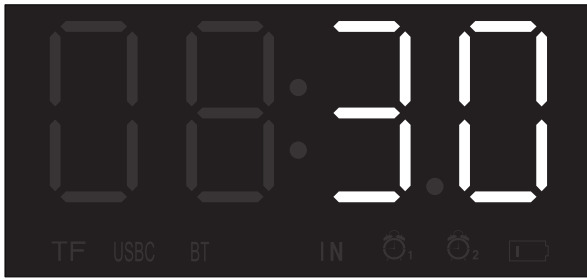

Remarks: there is no operation in the continuous 15S during the setup process. The system automatically exit the setup time mode and does not save.

### Alarm clock setting

1. In clock display state, short press “🕒”. Alarm clock 1 icon will light up.
2. Press “🕒” for 3 seconds to enter alarm clock 1 setting. Hours digital flash. Short press the “◀/−” or “+▶” to adjust hours.
3. Press “🕒” minutes digital flash. Short press the “◀/−” or “+▶” to adjust minutes.
4. Press “🕒” to enter the alarm sound setting option. Press “◀/−” or “+▶” to choose between 6 options.
5. Press “🕒” to enter alarm clock 1 settings. Press “◀/−” or “+▶” to On/Off alarm.
6. Press “🕒” for 3 seconds to exit and save alarm clock 1 settings. After setting is successful. The alarm clock 1 icon will always be light up. (Turn off the alarm clock, the icon light will go off)

Note: Alarm ring, no operation, ring for 2 minutes, then snooze, 3 minutes interval alarm clock ring again, repeat three times.



# TROUBLESHOOTING

## **Issue 1: Speaker is unable to connect successfully to your mobile device**

Problem 1: Speaker's battery is flat

Solution: Fully charge the speaker (4 hours) and retry connection with your mobile device.

Problem 2: Speaker not paired to your mobile device

Solution: Make sure that the speaker is successfully paired upon selecting 'Valore BTS30' in the device list.

Problem 3: Speaker and mobile device too far apart

Solution: Make sure that the speaker is within a metre range during pairing and connection.

Problem 4: Speaker is connected to other mobile device

Solution: Make sure that the speaker has already been disconnected before making a new connection with a new device.

## **Issue 2: Sound from the speaker is too soft or silent**

Problem 1: Speaker's battery is low / flat

Solution: Fully charge the speaker (4 hours) and retry connection with your mobile device.

Problem 2: Speaker or mobile device's volume is too low

Solution: Turn the volume of the speaker or mobile device up to increase the volume.

Problem 3: Music track may not be audible

Solution: Make sure that the music track is of a playable format for the mobile device.

Problem 4: Speaker and mobile device might not be connected properly.

Solution: Repeat the connection step via Bluetooth again to make sure that it is connected properly and try again.

## TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at [v.info@valore.sg](mailto:v.info@valore.sg).
- For Warranty Registration, visit [www.valore.sg](http://www.valore.sg).

### Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the speaker in a high temperature environment.
- Do not place the speaker near a fire or other excessively hot environments.
- Do not expose this speaker to moisture or submerge it in liquid. Keep speaker dry at all times.
- Do not attempt to charge the speaker using any other method or connection other than the headset's provided charging cable.
- Do not disassemble this speaker or attempt to repair or modify it in any manner.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this headset. If there is any damage to the speaker such as dents, punctures, tears, deformities or corrosion, stop using the speaker and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg), or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg).

### DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes.

The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the ("Materials") are the property of their respective owners and may be trademarks or registered trademarks.

Complies with  
IMDA Standards  
DA103331



Inspired by Valore Singapore

For full range of Valore products visit [www.valore.sg](http://www.valore.sg)