



Thank you for purchasing Valore Wireless Portable Family Karaoke System (BTS39). Please read the user manual thoroughly before using.

## Understanding the product

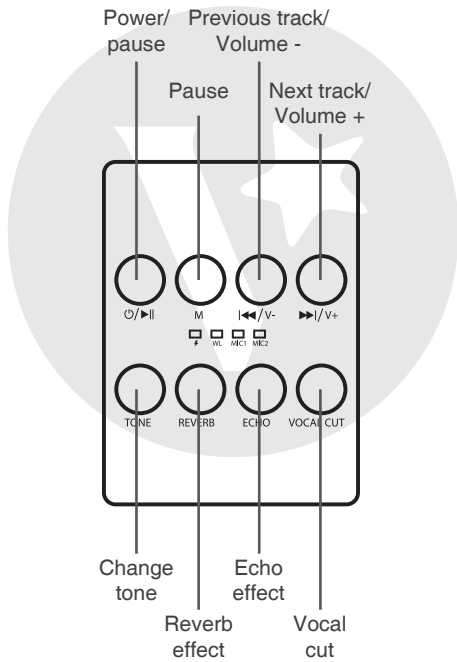

## How to charge

1. When battery is low, the device will shut down automatically
2. Connect a DC 5V charger to the charging connector to charge the speaker or microphones. The charging indicator will turn red when charging and turn off when fully charged.

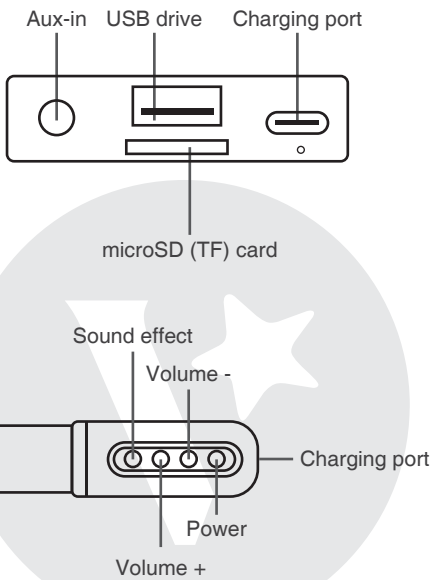

### Power/Pause

Press and hold to turn on/off the power  
Press to pause or play music

### Previous track/Volume - & Next track/Volume +

Press to choose the previous/next track.  
Press and hold to adjust volume

### Mode button

Press to switch between Bluetooth, USB drive, microSD card and Aux mode

### Vocal cut

Press to remove vocals from a song leaving only the background music

### Reverb/Echo sound effects

Press to choose the corresponding sound effect.  
The default is the Echo effect.

### Change tone

Press to switch between original, male, female, child and magic sound effect

### Sing via Bluetooth

1. Turn on the speaker  
Press and hold the power button, BT indicator will flash.
2. Bluetooth connection  
Turn on th Bluetooth on your smartphone. Search for "BTS39" to pair. The speaker will make a tone when connection is successful. BT indicator will light up.
3. Turn on the microphone  
Press and hold the power button on the microphone. The microphone will be connected to the speaker automatically and the corresponding indicator on the speaker will light up.
4. Adjusting soud effect  
Adjust the volume of the speaker and microphones to choose sound effect.
5. Play music  
Open a music app on your smartphone and play any music. The volume of the music can also be adjusted on your phone. Press the vocal cut button to remove vocals from the song.