

Thank you for purchasing the Valore LCD Wooden Digital Clock (LTL13).

Decorate your bed side with this compact yet stylish wooden alarm clock. Wake up and fall asleep to selection of five different soothing sounds from nature. Plus keep track of the time, date, day and room temperature on one screen.

**Important:** Please read the user manual thoroughly before using your Wooden Digital Clock


## Specifications:

- Power input: DC5V/500mAh (max)
- Light type: LCD screen
- Battery type: 3 x AAA battery (not included)
- Illumination: 150 - 300MCD
- Material: Bamboo + ABS
- Dimensions (L x W x H): 103 x 79 x 94mm
- Weight: 264g

## Package Contents:

- LCD wooden digital clock
- USB cable

## UNDERSTANDING THE PRODUCT

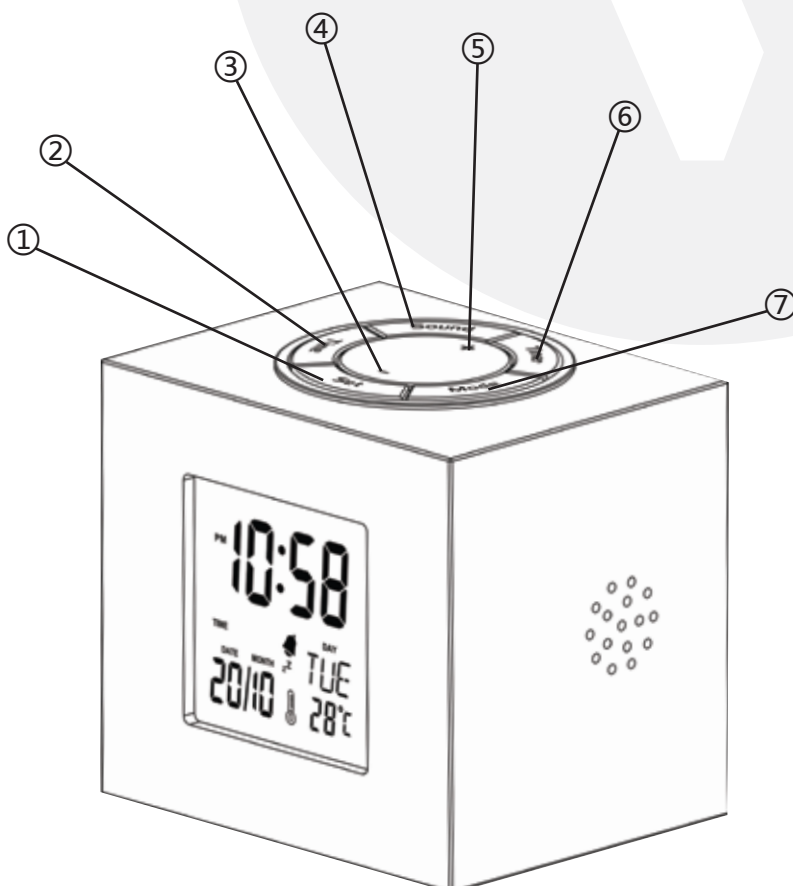

- ① SET
- ② TIME
- ③ '-'
- ④ SOUND
- ⑤ '+'
- ⑥ TIMER
- ⑦ MODE

# START USING THE LCD WOODEN DIGITAL CLOCK

## FUNCTIONS

### A. THE CLOCK

To set the time and date:

- Press «SET» to set the hour and adjust with the « + » or « - »
- Press «SET» to set the minute and adjust with the « + » or « - »
- Press «SET» to set the year and adjust with the « + » or « - »
- Press «SET» to set the month and adjust with the « + » or « - »
- Press «SET» to set the date and adjust with the « + » or « - »
- Press «SET» again to confirm your settings
- Press « + » to choose the hour format (12 hours or 24 hours format)

### B. THE ALARM

To set the alarm

- Press «mode»
- Press «SET» to set the hour and adjust with the « + » or « - »
- Press «SET» to set the minutes and adjust with the « + » or « - »
- Press «SET» to choose the snooze (from 1 to 60 minutes. Adjust with the « + » or « - »)
- Press «SET» to choose the sound of nature you desire for the alarm (5 sounds + 1 beep beep selectable) and 1-6 will appear. Adjust with the « + » or « - »
- To activate the alarm, press once on the « + » or « - » and the symbol «bell» will appear. This means that at the desired time, the sound of nature will ring out and the backlight will be turned on for 2 minutes. The alarm and the light will be permanently turned off after this lapse of time. To shut off the alarm before the 2 minutes, press any button.
- Press « + » or « - » a second time to activate the alarm's repeat function "Snooze" and the symbol Zz will appear. This means that at the desired time, the selected sound will ring out and the backlight will be turned on for 2 minutes. There will be 2 Snooze alarms. To stop the first snooze alarm before 2 minutes, press « + » or « - », the symbol Zz will be flashing on the display waiting for the second Snooze alarm time. To deactivate the second Snooze alarm, press «SET», the symbol Zz will still appear on the display but will not be flashing anymore. This means that the second "Snooze" alarm is deactivated.
- You can erase the 2 symbols by pressing « + » or « - » a third time, which means that neither the alarm nor the repeat function will be activated and your alarm will not go on.
- Press «mode» to return to the main screen.

### C. TIMER

To set the timer:

- Press «TIMER» and by default the screen will display 23:59:59
- Press «SET» to set the hour and adjust with the « + » or « - »
- Press «SET» to set the minutes and adjust with the « + » or « - »
- Press «SET» to set the seconds and adjust with the « + » or « - »
- Press «TIMER» to confirm the setting
- Press «TIMER» to start the timer
- Press «TIMER» to put the timer on pause and press «TIMER» again to restart the countdown.
- At the end of the countdown, the alarm will ring out for 1 minute. To stop the alarm before 1 minute, press any key.
- To clear the countdown, press « + ».
- During the TIMER mode, to go back to TIME mode, press «mode» once. The display will show the current time and «TIMER» will be shown on the display.

### D. THE TEMPERATURE

- Press « - » to go from Celsius to degree Fahrenheit and vice versa.

### E. THE SOUNDS OF NATURE

To listen to the sounds:

- First of all press on «TIME» to adjust the time for listening to the sounds of nature (from 10 minutes to 1 hour) and adjust by pressing «TIME» each time to add 10 minutes on top.
- Once the listening time is determined, press «**SOUND**».The number corresponding to the melody is written at the lower left of the screen and the remaining listening time is displayed on the screen
- Press «sound» to stop the melody
- Press «sound» to go to the second melody and so on.
- There are 5 different sounds of Nature and 1 beep beep sound.

### F. THE BACK LIGHT

- Press « + » or « - » to turn on the back light, and it will automatically off in 10 sec.

## TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at [v.info@valore.sg](mailto:v.info@valore.sg).
- For Warranty Registration, visit [www.valore.sg](http://www.valore.sg).

### Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the digital clock in a high temperature environment.
- Do not place the digital clock near a fire or other excessively hot environments.
- Do not expose its digital clock to moisture or submerge it in liquid. Keep digital clock dry at all times.
- Do not attempt to charge the digital clock using any other method or connection other than the digital clock's provided charging cable.
- Do not disassemble this digital clock or attempt to repair or modify it in any manner.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this digital clock. If there is any damage to the digital clock such as dents, punctures, tears, deformities or corrosion, stop using the digital clock and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg), or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg).

### DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes.

The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the ("Materials") are the property of their respective owners and may be trademarks or registered trademarks.

