

# Valore Outdoor Wireless Speaker (QKS6)

# VALORE

Thank you for purchasing the Valore Outdoor Wireless Speaker.

Designed for the outdoor enthusiasts, this Valore outdoor wireless speaker is equipped with shock-proof and water-resistant features while offering high quality full stereo music even in rough weather conditions. Your perfect companion for cycling, rock climbing, canoeing or simply your next outdoor barbeque/picnic.

**Important:** Please read the user manual thoroughly before using your outdoor wireless speaker.

## Specifications:

- Built-in battery: Lithium-ion battery 2000mAh
- Wireless range: Up to 10m
- Power input: DC5V
- Power output: 2 x 5W
- Playback time: 10 hours
- Charging time: 3 hours
- Material: ABS + Silicone
- Dimension (L x W x H): Ø60 x 170mm
- Weight: 350g

## Package Contents:

- Outdoor wireless speaker
- USB charging cable
- Carabiner hook
- Auxiliary Cable

## UNDERSTANDING THE PRODUCT



- ① Microphone
- ② Forward button/Volume '+'
- ③ Backward button/Volume '-'
- ④ On/Off button
- ⑤ Play/Pause/Hands-free button
- ⑥ Indicator light
- ⑦ TF card slot
- ⑧ Micro USB port
- ⑨ AUX in

# START USING THE OUTDOOR WIRELESS SPEAKER

## 1) Charging the outdoor wireless speaker

Make sure the speaker is fully charged in first use. The light and display will flash, indicating the outdoor wireless speaker needs to be recharged. Charge the speaker with the USB cable provided which is compatible with any computer or cell phone charger. The charge indicator light will be red while charging, when fully charged, light indicator will be turned off.

Note: Please charge the speaker for at least 8 hours before first use. Please make sure that the speaker is switched off when charging is in progress.

## 2) Pairing the outdoor wireless speaker (switched off)

Step 1: Press Turn On/Off button for 3 seconds to power.

When turned on, blue LED light will flash and a voice prompt will come after, then, your wireless speaker is ready for use.

Step 2: Activate Bluetooth function on your mobile device to begin pairing with speaker.

Step 3: Connect to the speaker by selecting 'Valore QKS6' under the device list.

Step 4: Once connected, the outdoor wireless speaker will beep.

Note: If the pairing is not successful, please turn off outdoor wireless speaker first, and then re-pair again. After pairing is successful, paired devices will remember each other. Unless pairing information is deleted because of new pairing, no need to pair when using the next time.

If you want to pair the wireless speaker with other devices, please turn off Bluetooth function of existing source device, and pair the wireless speaker with the new device according to steps 1-4 mentioned above..

## 3) Re-pairing the wireless speaker

Each time the wireless speaker is turned on, it will attempt to connect to the last device it was paired with automatically (mobile device with Bluetooth function turned on).

The wireless speaker will do as follows:

1. Connect to last connected devices automatically;
2. Be listed in the screen of devices as an output channel. Select 'Valore QKS6' as the output channel to play music.

Note: In some cases, the speaker may need to be manually selected from your operating system sound or hardware output list.

## 4) Wireless speaker controls

### a) Volume

- Control the volume via the Bluetooth device itself.
- Control the volume by pressing and holding onto the Volume +/- buttons

b) Play and Pause music

- Press Play/Pause button to pause the music
- Press again to resume playback

c) Next and Previous track

- Press Forward button to go to next track
- Press Backward button to go to previous track

**5) Hands free calling**

There will be a pause when there is a phone call.

Press 'Play/Pause/Hands-free' button to answer the call. Press 'Play/Pause/Hands-free' button again to hang up.

**6) TF card mode**


Insert the TF card when the speaker is turned on.

Short press 'On/Off' button when in Bluetooth mode, it will be switched to the TF card mode.

Noted: The outdoor wireless speaker can play music of MP3/WMA/APE format from your card.

**7) Connect via auxiliary cable**

You may also connect to the wireless speaker via the provided auxiliary cable with your mobile device to enjoy music of the same sound quality.

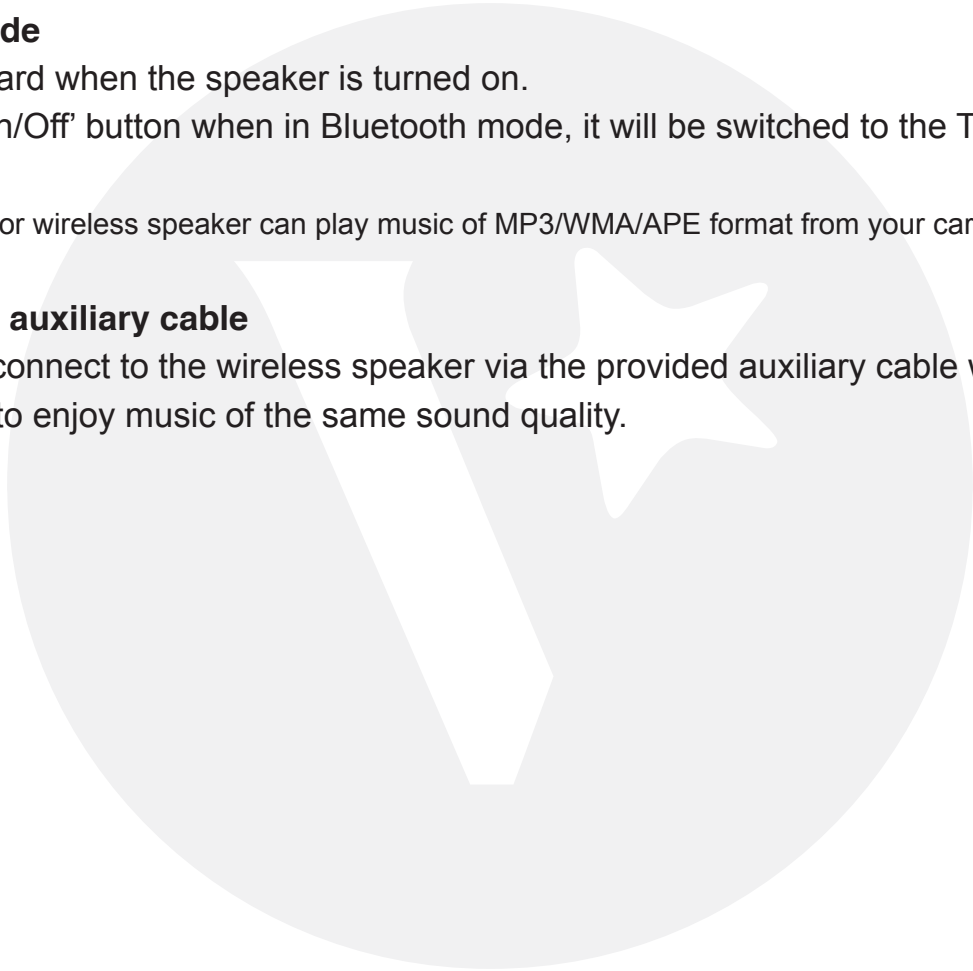

# TROUBLESHOOTING

## **Issue 1: Speaker is unable to connect successfully to your mobile device**

Problem 1: Speaker's battery is flat

Solution: Fully charge the speaker and retry connection with your mobile device.

Problem 2: Speaker not paired to your mobile device

Solution: Make sure that the speaker is successfully paired upon selecting 'Valore QKS6' in the device list.

Problem 3: Speaker and mobile device too far apart

Solution: Make sure that the speaker is within a metre range during pairing and connection.

Problem 4: Speaker is connected to other mobile device

Solution: Make sure that the speaker has already been disconnected before making a new connection with a new device.

## **Issue 2: Sound from the speaker is too soft or silent**

Problem 1: Speaker's battery is low / flat

Solution: Fully charge the speaker and retry connection with your mobile device.

Problem 2: Speaker or mobile device's volume is too low

Solution: Turn the volume of the speaker or mobile device up to increase the volume.

Problem 3: Music track may not be audible

Solution: Make sure that the music track is of a playable format for the mobile device.

Problem 4: Speaker and mobile device might not be connected properly.

Solution: Repeat the connection step via Bluetooth/ again to make sure that it is connected properly and try again.

## TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at [v.info@valore.sg](mailto:v.info@valore.sg).
- For Warranty Registration, visit [www.valore.sg](http://www.valore.sg).

### Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the speaker in a high temperature environment.
- Do not place the speaker near a fire or other excessively hot environments.
- Do not expose this speaker to moisture or submerge it in liquid. Keep speaker dry at all times.
- Do not attempt to charge the speaker using any other method or connection other than the speaker's provided charging cable.
- Do not disassemble this speaker or attempt to repair or modify it in any manner.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this speaker. If there is any damage to the speaker such as dents, punctures, tears, deformities or corrosion, stop using the speaker and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg), or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg).

### DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes.

The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the ("Materials") are the property of their respective owners and may be trademarks or registered trademarks.

Complies with  
IDA standards  
DA 103331



Inspired by Valore Singapore

For full range of Valore products visit [www.valore.sg](http://www.valore.sg)