

Duomo Wireless Speaker (V-AS330T)

VALORE

A statement piece with its unique design, the wireless features lets you connect conveniently for your favourite tunes. Plus, enjoy your music directly from the dual front speakers.

Important: Please read the user manual thoroughly before using your Bluetooth Speaker.


Specifications:

- Model: V-AS330T
- Bluetooth version: 3.0
- Wireless range: Up to 10 metres
- Battery type: Lithium-ion
- Power input: DC12V/1.2A
- Playback time: 3 hours
- Charging time: 2 hours
- S/N ratio: $\geq 75\text{dB}$
- Speaker power: 5W x 2R
- Speaker impedance: 4 Ohm
- Speaker frequency: 80Hz ~ 18kHz)
- Material(s): Aluminium + Plastic
- Dimensions (L x W x H): 200 x 220 x 115mm
- Weight: 1800g

Package Contents:

- Duomo wireless speaker
- Ac Adapter
- Auxiliary cable

UNDERSTANDING THE PRODUCT

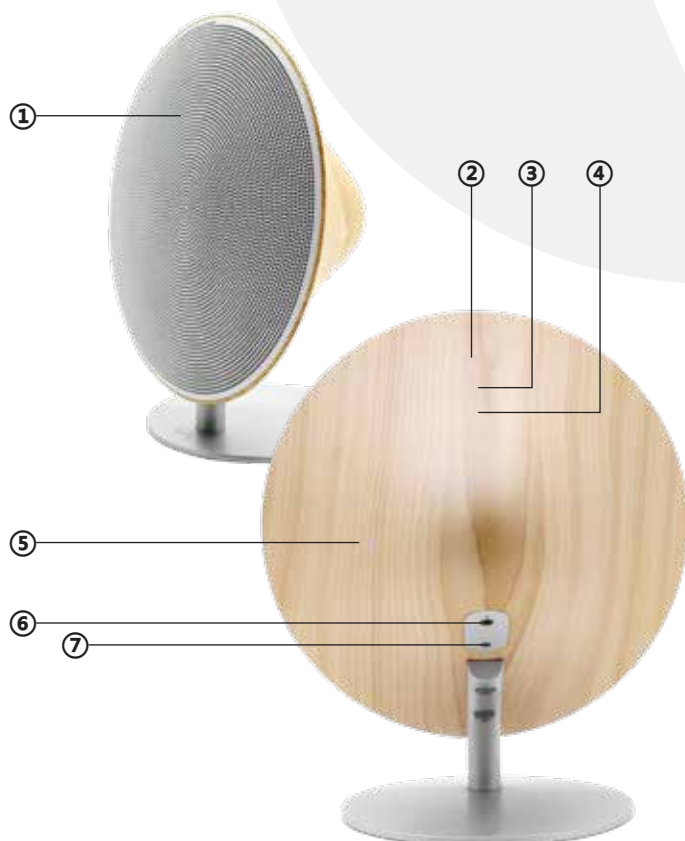

- ① Speaker
- ② Reset (connection)/ Volume ' + '
- ③ ON/OFF switch
- ④ Volume ' - '
- ⑤ NFC touch point
- ⑥ Auxiliary port
- ⑦ AC input port

START USING THE WIRELESS SPEAKER

1) Charging the speaker (1.2A wall plug adapter included)

Make sure that the wireless speaker is turned off before charging. Plug the adapter cable into the charging port located at the lower back of the wireless speaker and connect it to a wall plug.

To fully charge the speaker, it will require at least 2 hours and indicated by a solid LED light.

Note: Please charge the speaker for at least 8 hours before first use. Please make sure that the speaker is switched off when charging is in progress.

2) Turning on/off the speaker

Press and hold the 'ON/OFF' button for about 5 seconds to turn on the speaker, thus producing an audible sound and displays a solid LED light to indicate that the speaker is turned on.

Press and hold the 'ON/OFF' button again for another 5 seconds to turn off the speaker.

3) Pairing the wireless speaker via Bluetooth

Step 1: Turn on the wireless speaker.

Step 2: Activate Bluetooth function on your mobile device to begin pairing with the speaker.

Step 3: Connect to the speaker by selecting 'Valore AS330T' under the device list.

Step 4: Once connected, the speaker then produces an audible sound to indicate that the connection is successful.

Note: If the pairing is not successful, press the 'Reset' button and then re-pair again. After pairing is successful, paired devices will remember each other. Unless pairing information is deleted because of new pairing, no need to pair when using the next time.

4) Pairing the wireless speaker via NFC (android only)

Step 1: Turn on the wireless speaker

Step 2: Enable NFC function on your mobile phone (NFC settings may be found under your devices' "More/Additional Settings")

Step 3: Gently hold your mobile phone over the NFC logo located at the side of the Bluetooth speaker, while making minimal contact.

Step 4: Once connected, the speaker then produces an audible sound to indicate that the connection is successful.

5) Auto connection with the wireless speaker

Each time the wireless speaker is turned on, it will attempt to connect to the last device it was paired with automatically (mobile device with Bluetooth function turned on).

The wireless speaker will do as follows:

1. Connect to last connected devices automatically;
2. Be listed in the screen of devices as an output channel. Select 'Valore AS330T' as the output channel to play music.

Note: In some cases, the speaker may need to be manually selected from your operating system sound or hardware output list.

6) Pairing with another device without turning off the wireless speaker

When the wireless speaker is already paired with a device, press the 'Reset' button to break existing connection, then pair the wireless speaker with the other device.

7) Connect via auxiliary cable

You may also connect to the wireless speaker via the provided auxiliary cable with your mobile device to enjoy music of the same sound quality.



9) Wireless speaker controls (located at the back)

a) Volume

- Control the volume via the wireless device;
- Swipe upwards to increase the volume and downwards to decrease the volume

b) Reset connection

- Press and hold the 'Reset' button for about 3 seconds to reset the connection between the current device with the wireless speaker.

c) ON/OFF switch

- Press and hold button for 5 seconds to turn on
- Press and hold button again for 5 seconds to turn off the speaker



Reset Connection / Volume ' + '



ON/OFF Switch



Volume ' - '

TROUBLESHOOTING

Issue 1: Speaker is unable to connect successfully to your mobile device

Problem 1: Speaker's battery is flat

Solution: Fully charge the speaker (2 hours) and retry connection with your mobile device.

Problem 2: Speaker not paired to your mobile device

Solution: Make sure that the speaker is successfully paired upon selecting 'Valore AS330T' in the device list.

Problem 3: Speaker and mobile device too far apart

Solution: Make sure that the speaker is within a metre range during pairing and connection.

Problem 4: Speaker is connected to other mobile device

Solution: Make sure that the speaker has already been disconnected before making a new connection with a new device.

Issue 2: Sound from the speaker is too soft or silent

Problem 1: Speaker's battery is low / flat

Solution: Fully charge the speaker (2 hours) and retry connection with your mobile device.

Problem 2: Speaker or mobile device's volume is too low

Solution: Turn the volume of the speaker or mobile device up to increase the volume.

Problem 3: Music track may not be audible

Solution: Make sure that the music track is of a playable format for the mobile device.

Problem 4: Speaker and mobile device might not be connected properly.

Solution: Repeat the connection step via Bluetooth/auxiliary cable again to make sure that it is connected properly and try again.

Issue 3: The user manual instructions does not work

Solution: Contact the manufacturer or the staff at the store of purchase for assistance.

TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at v.info@valore.sg.
- For Warranty Registration, visit www.valore.sg.

Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the speaker in a high temperature environment.
- Do not place the speaker near a fire or other excessively hot environments.
- Do not expose this speaker to moisture or submerge it in liquid. Keep speaker dry at all times.
- Do not attempt to charge the speaker using any other method or connection other than the speaker's provided charging cable.
- Do not disassemble this speaker or attempt to repair or modify it in any manner.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this speaker. If there is any damage to the speaker such as dents, punctures, tears, deformities or corrosion, stop using the speaker and contact us immediately via email at v.info@valore.sg, or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at v.info@valore.sg.

DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes.

The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the ("Materials") are the property of their respective owners and may be trademarks or registered trademarks.

Complies with
IDA standards
DA 103331



Inspired by Valore Singapore

For full range of Valore products visit www.valore.sg