

Thank you for purchasing the Valore LED Wooden Alarm Clock.

Complement any room with the contemporary look and functional features of this touch-sensitive wooden alarm clock. Tap gently or activate just by snapping your fingers or clapping your hands. Enjoy a longer battery life with its auto-shut off feature when it detects silence in the room.

**Important:** Please read the user manual thoroughly before using your wooden clock.

## Specifications:

- Two display mode:
  - Display 1: Time and temperature (display alternately)
  - Display 2: Time (default display)
- Battery type: 4 x AAA (battery not included)
- Power input: DC5V
- Material: MDF+PVC

For V-LWC169

- Dimensions (L x W x H): 120 x 80 x 70mm
- Weight: 170g

For V-LWC170


- Dimensions (L x W x H): 125 x 45 x 65mm
- Weight: 160g

For V-LWC171

- Dimensions (L x W x H): 100 x 40 x 60mm
- Weight: 120g


## Package contents:

 - LED wooden alarm clock
- USB cable

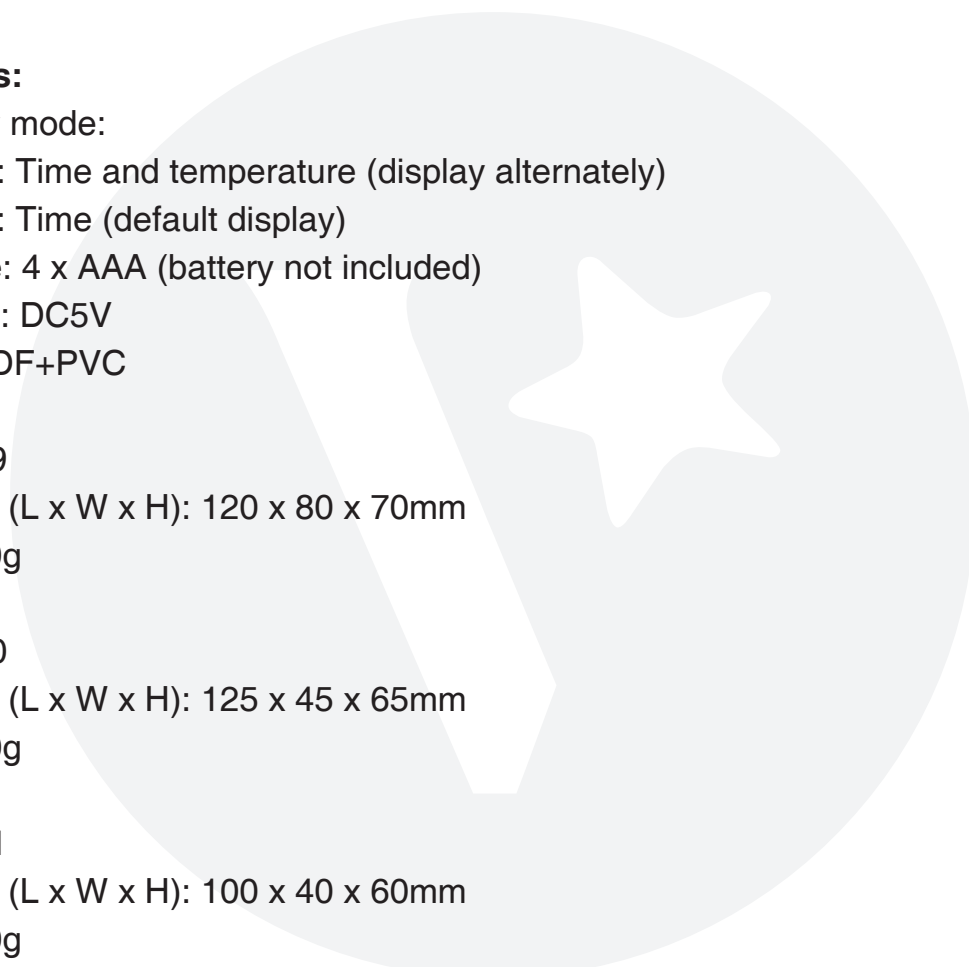


# UNDERSTANDING THE PRODUCT

 
V-LWC171 Wooden Alarm Clock

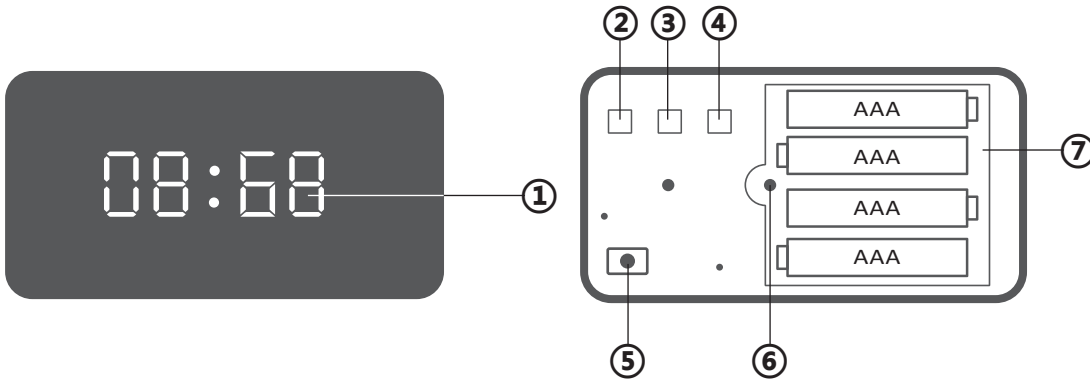

V-LWC170 Wooden Alarm Clock

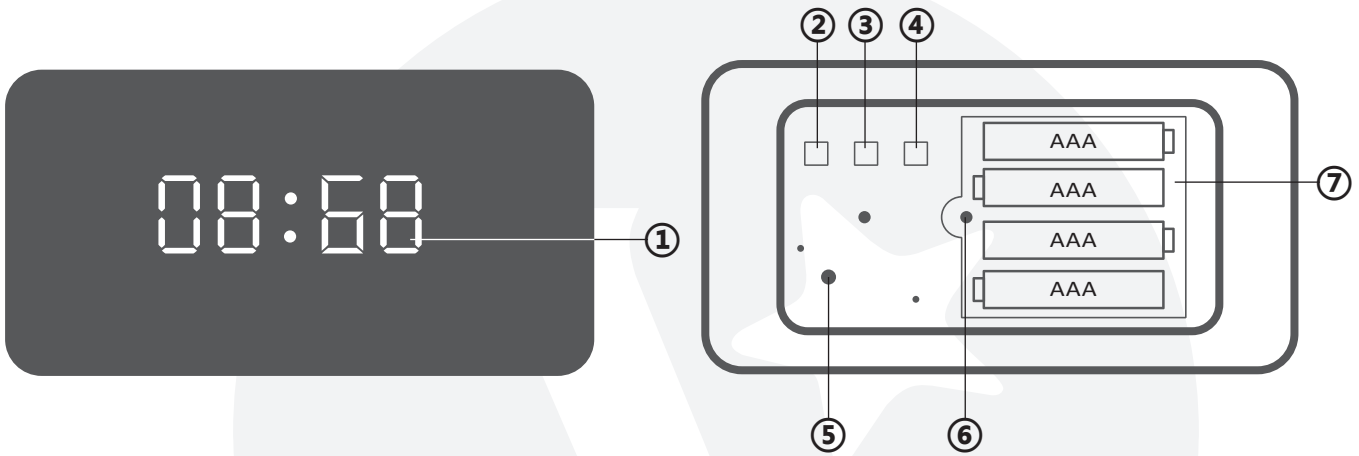 

V-LWC169 Wooden Alarm Clock

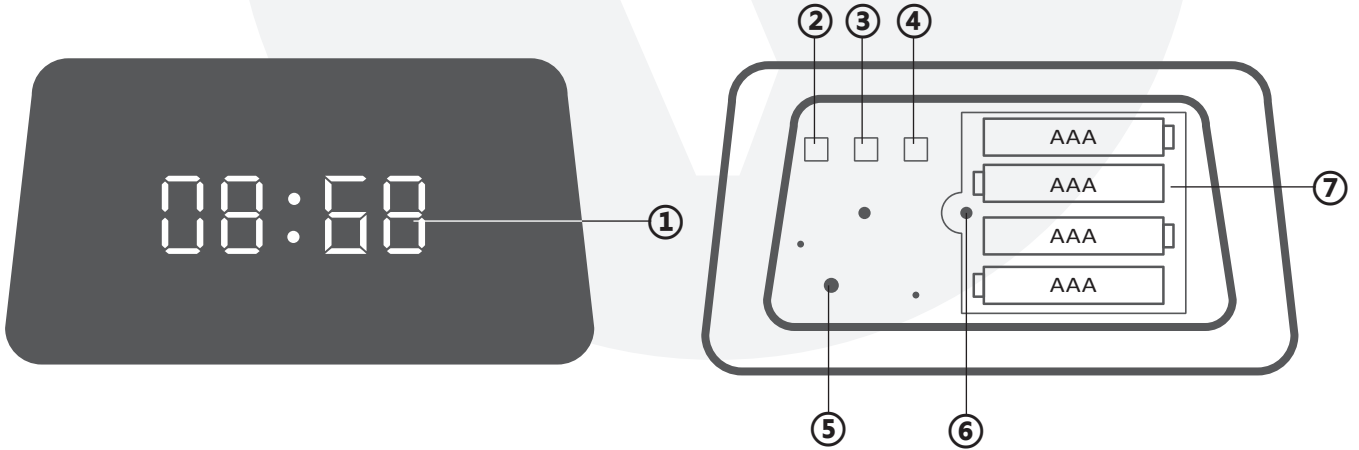 

- ① Digital display
- ② Set button
- ③ Select 'Up' button
- ④ Select 'Down' button

- ⑤ Power input
- ⑥ Reset button
- ⑦ Battery compartment

# START USING THE ALARM CLOCK

## 1) Setting up the alarm clock

Press and hold the 'Set' button for about 3 seconds to enter into setting mode.

### The settings may be set in the following sequence:

 
Year > Month > Date > Hour > Minute > 12H/24H > AL(Alarm) > Alarm 1 > Alarm 2 > Alarm 3 > Exit setting

#### a) Year setting:

The 'Year' section will flash

Press the 'Up' / 'Down' button to select the year.

Press the 'Set' button to confirm and move on to set 'Month/Date'.

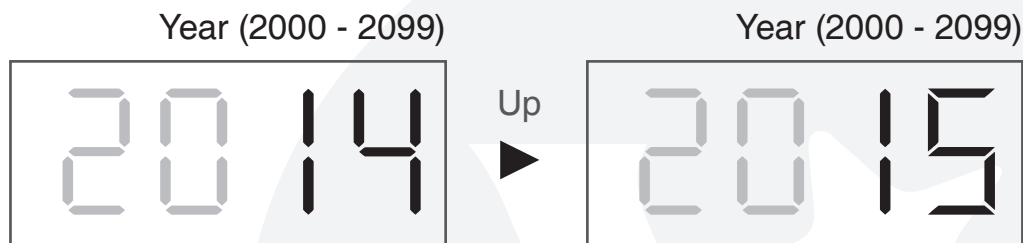


#### b) Month/Date setting:

The 'Month/Date' section will flash

Press the 'Up' / 'Down' button to select the month and press the 'Set' button to set the date.

 Press the 'Set' button to confirm and move on to set 'Hour/Minute'.

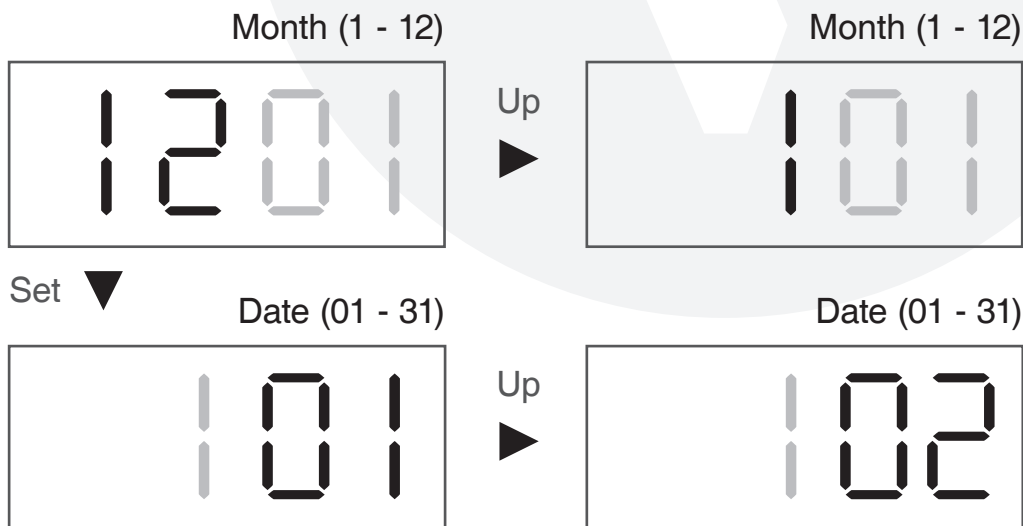


### c) Hour/Minute setting:

The 'Hour/Minute' section will flash

Press the 'Up' / 'Down' button to select the hour and press the 'Set' button to set the minute.

 
Press the 'Set' button to confirm and move on to set '12H/24H'.

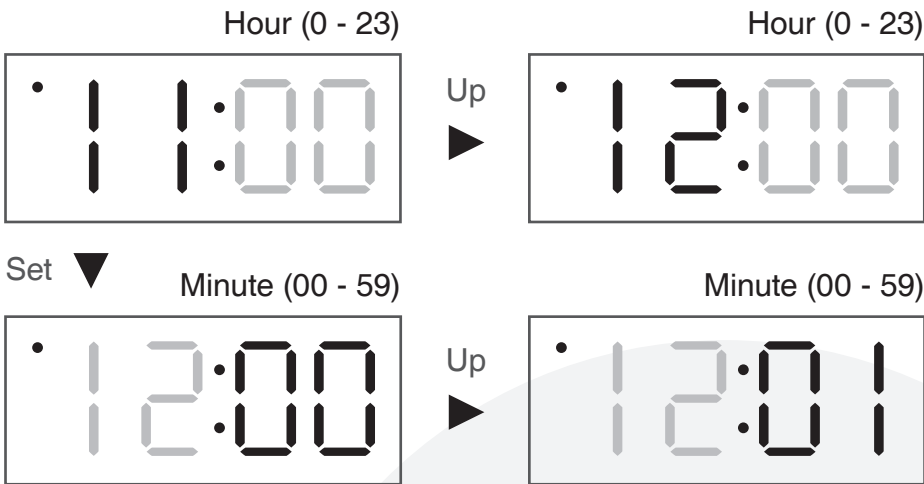

Note: If any part of the detail is set wrongly, skip through the rest and restart the setting process from the 'Year'. Please note that previous setting is saved after exiting setting mode.

### d) 12H/24H setting:

 Press the 'Up' / 'Down' button to select the format of the display time. Press the 'Set' button to confirm and move on to set 'Alarm'.

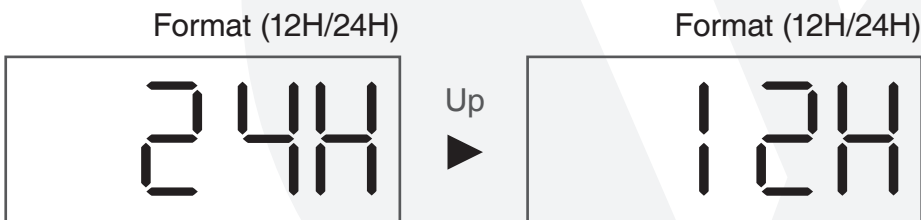

Note: Default setting at 24H format. Top left "LED" indicator lights up, stands for 'PM' and goes off stands for 'AM'.

### e) Alarm 1~3 setting:

The 'Alarm' section will flash

Press the 'Up' / 'Down' button to select the hour and press the 'Set' button to set the minute.

Press the 'Set' button to confirm and move on to set 'ON/-- : A1', etc.

### e) Alarm 1~3 setting:

 
The 'Alarm' section will flash

Press the 'Up' / 'Down' button to select the hour and press the 'Set' button to set the minute.

Press the 'Set' button to confirm and move on to set 'ON/-- : A1', etc.


Alarm (Hour)

Up

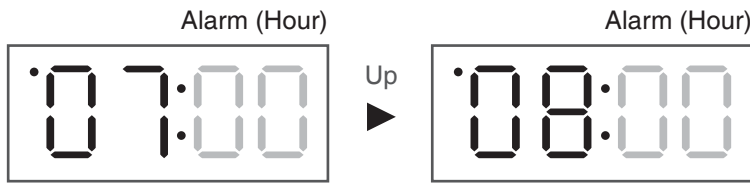


Set ▼ Alarm (Minute)

 Up

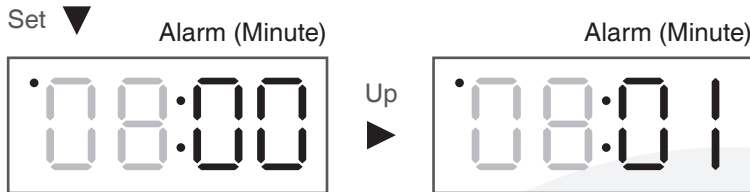


Set ▼ Alarm (ON/--)

 Up

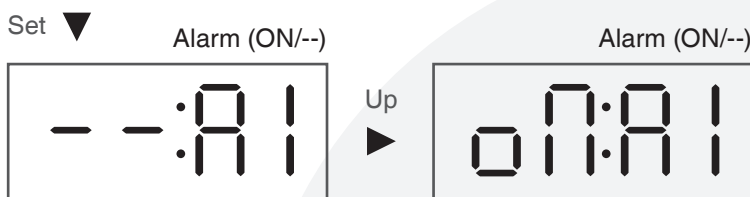


Set ▼ Alarm 2 (Hour)

 Up

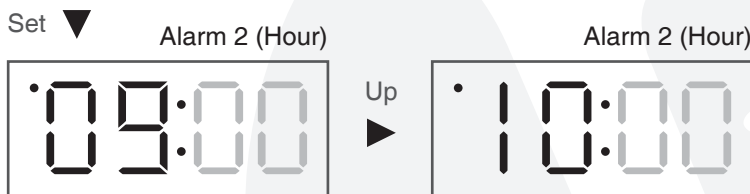


Set ▼ Alarm 2 (Minute)

 Up

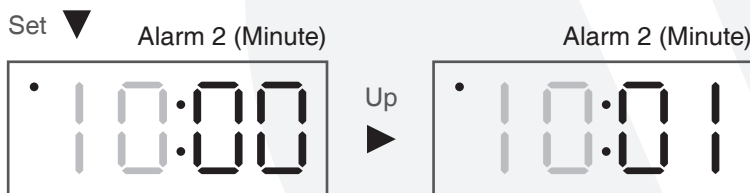


Set ▼ Alarm 2 (ON/--)

 Up

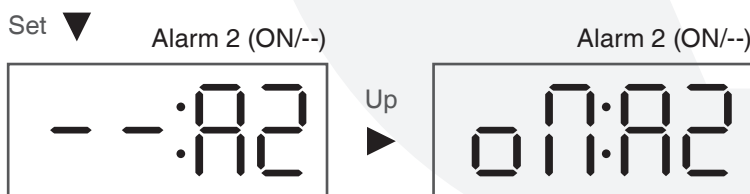


Set ▼ Alarm 3 (Hour)

 Up

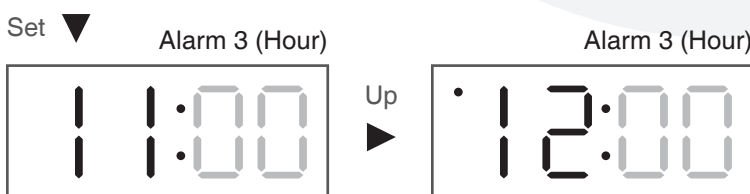


Set ▼ Alarm 3 (Minute)

 Up

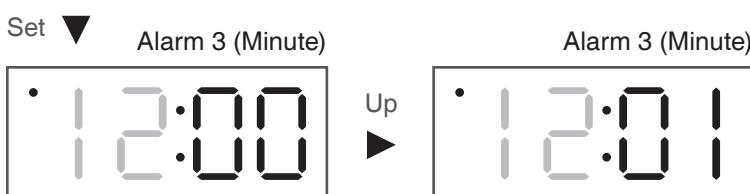

Set ▼ Alarm 3 (ON/--)

 
Up

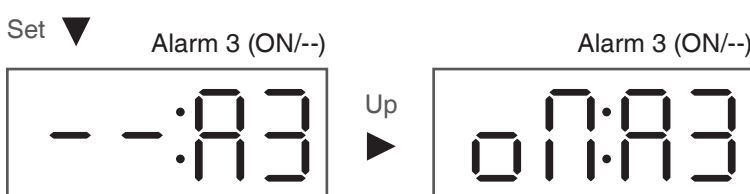

## 2) 'Set' button function

Switching in-between display modes

 
During 'Normal' mode, press the 'Set' button once to switch to another display type.

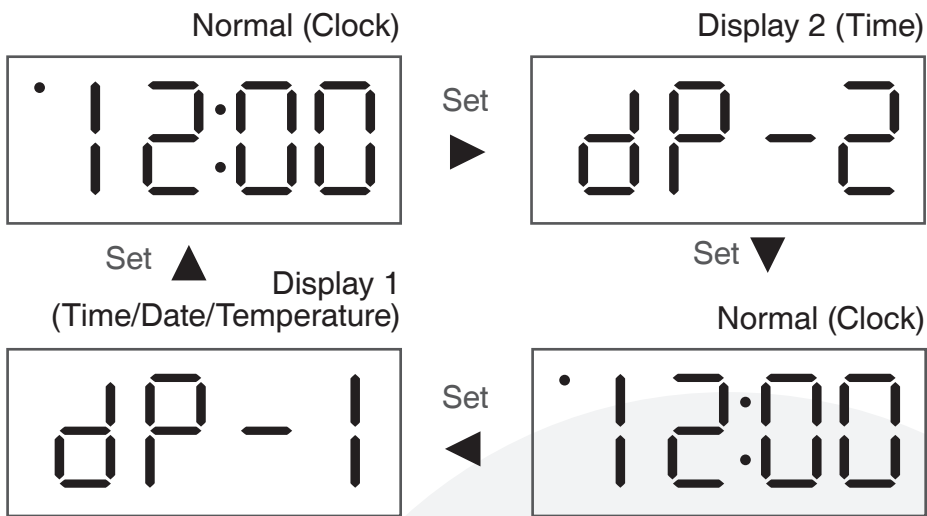

## 3) 'Up' button function

a) Switching to temperature view (°C/°F)

 During 'Normal' mode, press the 'Up' button once to view the temperature and press again to switch between °C/°F format.

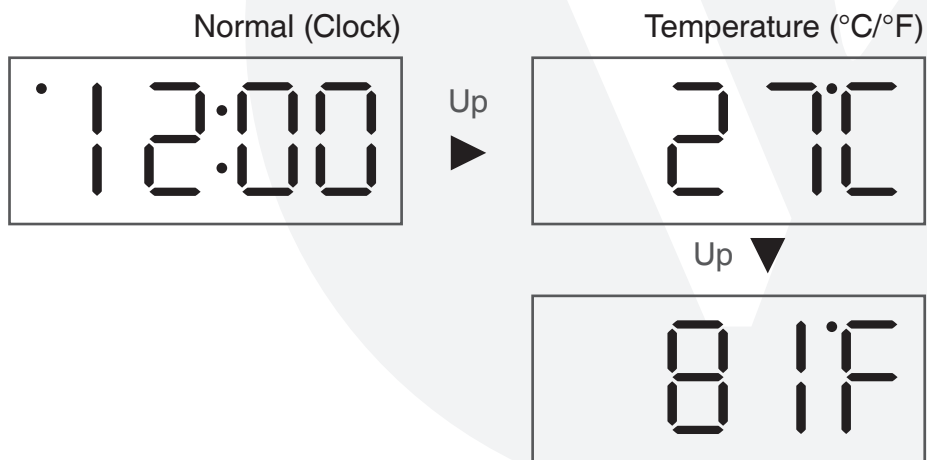


b) Speed up selection

During 'Setting' mode, press and hold the 'Up' button to speed up the selection.

#### 4) 'Down' button function
 
##### a) Switching ON or OFF sound control (ON/--)

During 'Normal' mode, press the 'Down' button once to switch the sound control ON/OFF.

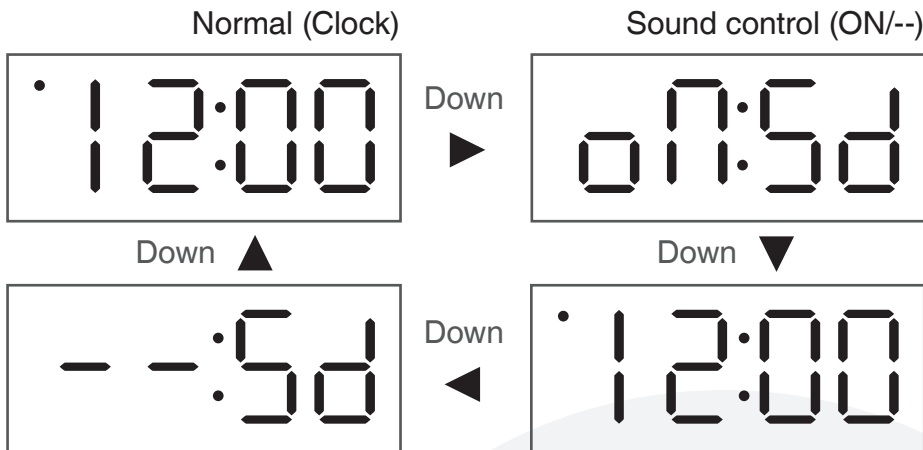


##### b) Speed up selection

During 'Setting' mode, press and hold the 'Down' button to speed up the selection.

#### 5) Luminance adjustment (4 level brightness: L3~0)

 During 'Normal' mode, press and hold the 'Up' button for about 3 seconds to enter into luminance adjustment setting. Once completed, press and hold the 'Up' button for about 3 seconds to exit setting.

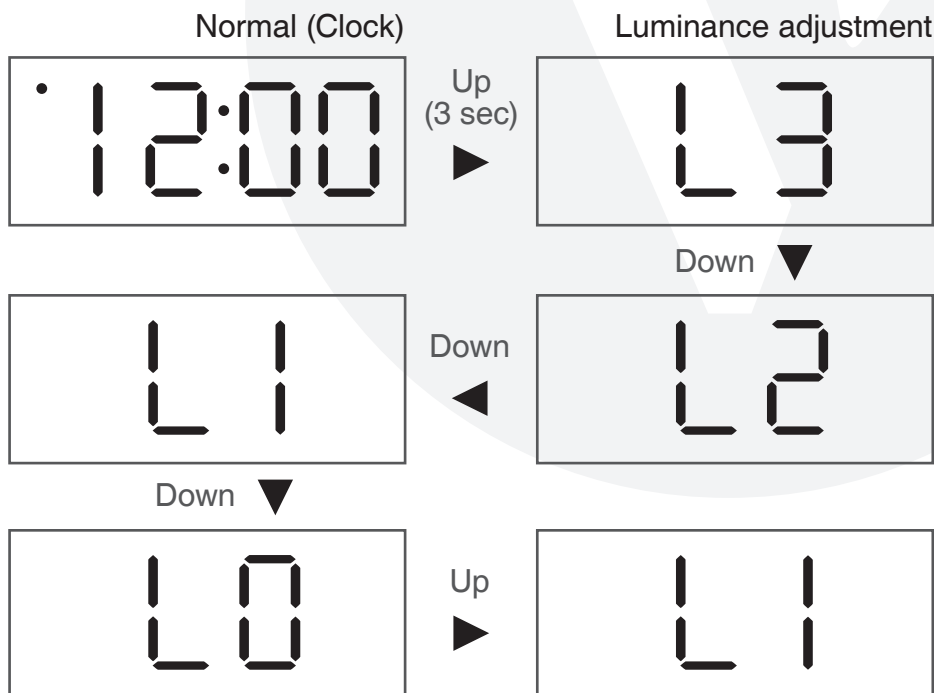

#### 6) 'Reset' button function

Press the 'Reset' button any time to restore the alarm clock to its original state and re-set the clock.

## UNIQUE FEATURES

### 1) Sound control (Power saving mode)

The LED display will go off automatically after 5 seconds. When a close by sound of more than 60 Db is produced or when being lightly tapped, the LED display will be switch on. This feature will assist in power saving, thus prolonging battery life.

### 2) Luminance control (4 level brightness)

Adjust the brightness of the LED display according to your preference.

4 levels of brightness to adjust to:

**L3 > L2 > L1 > L0**

Note: This clock would go half-dim from 18:00 hrs - 07:00 hrs.





## TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at [v.info@valore.sg](mailto:v.info@valore.sg).
- For Warranty Registration, visit [www.valore.sg](http://www.valore.sg).

### Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the alarm clock in a high temperature environment.
- Do not place the alarm clock near a fire or other excessively hot environments.
- Do not expose its alarm clock to moisture or submerge it in liquid. Keep alarm clock dry at all times.
- Do not attempt to charge the alarm clock using any other method or connection other than the alarm clock 's provided charging cable.
- Do not disassemble this alarm clock or attempt to repair or modify it in any manner.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this alarm clock. If there is any damage to the alarm clock such as dents, punctures, tears, deformities or corrosion, stop using the alarm clock and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg), or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg).

### DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images (“Materials”) provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes.

The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the (“Materials”) are the property of their respective owners and may be trademarks or registered trademarks.



Inspired by Valore Singapore

For full range of Valore products visit [www.valore.sg](http://www.valore.sg)