

1080p Full HD WiFi Action Camera (VMS506)

VALORE

Thank you for purchasing Valore 1080p Full HD WiFi Action Camera.

Capture your action-packed moments with rich colour in superior 1080p full HD image quality. Enjoy full control of your Action Camera with the remote.

Important: Please read the user manual thoroughly before using your action camera.

Specifications:

- Image sensor: CMOS sensor
- LCD: 2.0 inch
- Lens: 170° wide-angle
- Resolution:
 - 1920 x 1080 at 30fps
 - 1280 x 720 at 60fps
 - 1280 x 720 at 30fps
- Input: DC5V/1A
- Battery type: Built-in 3.7V Lithium battery 900mAh
- Video format: MOV
- Video codec: H.264
- WDR/HDR: Support
- G-sensor: Support
- Photo format: JPEG
- Dimension (L x W x D): 59 x 41 x 29mm
- Weight: 60g (with waterproof case 154g)

Package Contents:

- WiFi Action camera
- Waterproof housing
- Protective backdoor
- Remote controller (CR2025 battery included)
- Adhesive x 2
- Bicycle holder
- Base
- Mount
- Clip x 2
- Switch support x 3 sets
- Lens cloth
- USB cable
- Helmet base x 2
- Bandages x 4
- Ribbon x 4
- Wire rope

UNDERSTANDING THE PRODUCT
























- ① Power/Mode button
- ② Lens
- ③ Micro USB port
- ④ HDMI port
- ⑤ Remote signal receiver
- ⑥ WiFi/OK/Shutter button
- ⑦ Mic
- ⑧ Micro SD card slot



- ① Status indicator (Blue)
- ② Charging indicator (Red)
- ③ Screen
- ④ Down
- ⑤ Up
- ⑥ Speaker
- ⑦ Battery cover
- ⑧ Battery cover lock

START USING THE ACTION CAMERA

Accessories

						
Waterproof Housing	Bicycle Holder	Mount 1 (Base)	Mount 2	Mount 3	Switch Support 1	Switch Support 2
						
Switch Support 3	Mount 4	Clip 1	Clip 2	Helmet Base	Bandages	Battery
						
Adhesives	Ribbon	Wire Rope	Protective Backdoor	USB Cable	Remote Control	Lens Cloth

Mounting



Mounting



1) Installing and removing battery

- a) Pull back the back cover lock to release the battery cap.
- b) Correctly install battery into action camera as indicated by +/- symbols and direction of arrowed marked on battery.

2) Charging

- a) While charging, a red indicator will be blink, charging icon will be indicated on screen.
- b) When the battery is full charged, the screen will indicate a full battery icon.

3) Switching On/Off

- a) Press and hold onto Mode/Power button for 3 - 5 seconds till welcome screen appears.
- b) Press and hold onto Mode/Power button for 3 - 5 seconds to switch it off.

4) Mode switching

- a) After the action camera is switched on, short press the Mode/Power button to switch between video recording / photo shooting / playback & menu.
- b) Symbols of mode will be displayed on the top left of the screen.

5) Video recording & photo shooting

- a) Insert micro SD card, when in video recording mode, press OK button to start recording, the recording icon on the top left will start to flash. Press OK button again to stop recording.
- b) When in photo shooting mode, press OK button to take photos.

6) File storage & playing

- a) Micro SD card have to be Class 10 or above.
- b) Use a USB cable to export the videos into a computer, the action camera will prompt Mass Storage / PC camera. Click on Mass Storage to play and store image.
- c) Use a card reader to access the image data on the micro SD card.

Note: Make sure the action camera is turned off properly before removing the micro SD card.

7) WiFi Mode

- a) Press and hold OK button for 3 seconds until the LCD displays "Waiting for WiFi connection" message.
- b) Search for "Action cam" on your mobile device. Key in password (1234567890) if required.
- c) After your device are connected, open the app "ismart dv", you can control the camera on your mobile device.

Note: "ismart dv" can be downloaded from 'google play' and 'app store'.

8) Remote controller

- a) Turn off the Action camera, take picture and record videos by using the remote controller.

Note: The controller cannot be use to turn on the Action camera

TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at v.info@valore.sg.
- For Warranty Registration, visit www.valore.sg.

Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the action camera in a high temperature environment.
- Do not place the action camera near a fire or other excessively hot environments.
- Do not expose this action camera to moisture or submerge it in liquid. Keep action camera dry at all times.
- Do not attempt to charge the action camera using any other method or connection other than the action camera's provided charging cable.
- Do not disassemble this action camera or attempt to repair or modify it in any manner.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this action camera. If there is any damage to the action camera such as dents, punctures, tears, deformities or corrosion, stop using the action camera and contact us immediately via email at v.info@valore.sg, or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at v.info@valore.sg.

DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes.

The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the ("Materials") are the property of their respective owners and may be trademarks or registered trademarks.



Inspired by Valore Singapore

For full range of Valore products visit www.valore.sg