

# 1080P Full HD Action Camera (VMS54)

# VALORE

Thank you for purchasing Valore 1080P Full HD Action Camera.

Capture action-packed moments in rich colour details with 1080p full HD image quality and 140° wide angle lens. Plus, a waterproof casing protects your camera up to 30m under water.

**Important:** Please read the user manual thoroughly before using your 1080p full HD action camera.

## Specifications:

- Image sensor: 1.3 Mega pixel
- LCD: 2.0" TFT screen
- Lens: 140° ultra wide-angle
- Resolution: 1920 x 1080P @30fps /  
1280 x 720P @30fps /  
640 x 480P @30fps
- Still image resolution: 12M / 10M / 8M / 5M /  
3M / 2M / 1M / VGA
- Input : 5V/0.5A
- Water resistance : Up to 30m
- Battery type: 3.7V Lithium battery 900mAh
- Video format: AVI
- Video codec: H.264
- Photo format: JPG
- Storage: Min 8GB, Mac 32GB Class 10 microSD card
- Dimension(L x W x H): 59 x 25 x 41mm
- Weight: 55g (with waterproof case 147g)

## Package Contents:

- 1080P Full HD Action Camera
- Waterproof casing
- Bicycle holder
- Bandages x 4
- Switch support
- Adaptor
- Helmet base
- Clip
- Wire rope
- USB cable
- Cable tie x 4
- Lens cloth
- Battery

## UNDERSTANDING THE PRODUCT



- ① On/Off switch/Mode
- ② Indicator
- ③ OK
- ④ Mic
- ⑤ Micro USB port
- ⑥ Micro SD card slot



- ① Charging indicator
- ② Operation indicator
- ③ Up
- ④ Speaker
- ⑤ Down



⑥

⑦


# Accessories



# Mounting



# Mounting

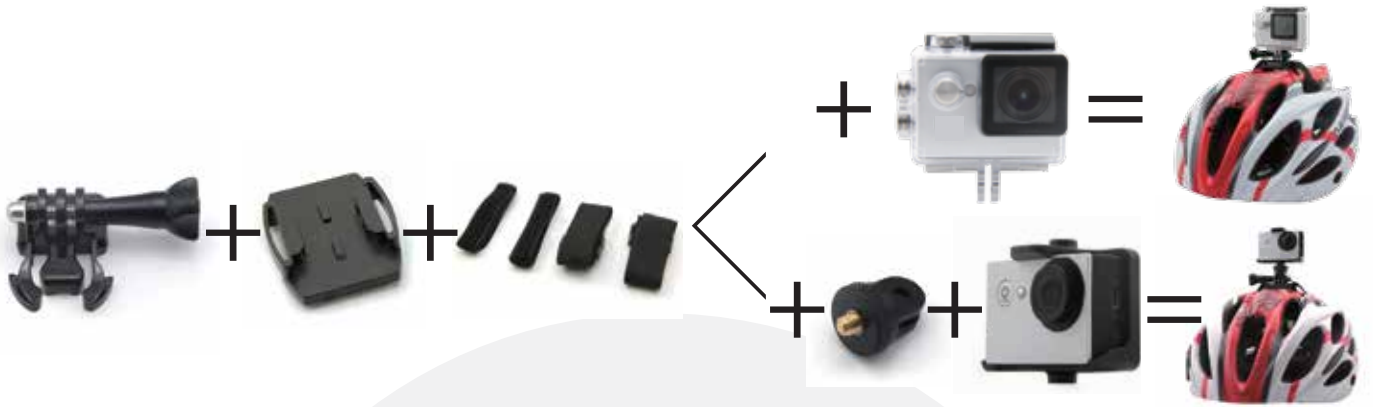

## **1) Installing and removing battery**

- a) Pull back the back cover lock to release the battery cap.
- b) Correctly install battery into action camera as indicated by +/- symbols and direction of arrowed marked on battery.

## **2) Charging**

- a) While charging, a red indicator will be lit.
- b) When the battery is full charged, the red indicator will go off.

## **3) Switching On/Off**

- a) Press and hold onto Mode/Power button for 3 - 5 seconds till welcome screen appears.
- b) Press and hold onto Mode/Power button for 3 - 5 seconds till goodbye screen appears.

## **4) Mode switching**

- a) After the action camera is switched on, short press the Mode/Power button to switch between video recording / photo shooting / playback
- b) Symbols of mode will be displayed on the top left of the screen.

## **5) Video recording & photo shooting**

- a) Insert micro SD card, when in video recording mode, press OK button to start recording, the recording icon on the top left will start to flash. Press OK button again to stop recording.
- b) When in photo shooting mode, press OK button to take photos.

Note: Format your micro SD card before use.

Switch on the action camera, in setup mode, choose format and confirm action.

## **6) File storage & playing**

- a) Micro SD card have to be Class 10 or above.
- b) Use a USB cable to export the videos into a computer, the action camera will prompt Mass Storage. Click on Mass Storage to play and store image.
- c) Use a card reader to access the image data on the micro SD card.

Note: Make sure the action camera is turned off properly before removing the micro SD card.

## **7) Set up**

- a) After the action camera is switched on, long press the OK button to enter settings for respective mode.

Video recording mode: Resolution / Loop recording / Exposure / Date stamp

Photo shooting mode : Resolution / Capture Mode / Quality / Exposure / Date stamp

Playback mode : Lock / Delete

## TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at [v.info@valore.sg](mailto:v.info@valore.sg).
- For Warranty Registration, visit [www.valore.sg](http://www.valore.sg).

### Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the action camera in a high temperature environment.
- Do not place the action camera near a fire or other excessively hot environments.
- Do not expose this action camera to moisture or submerge it in liquid. Keep action camera dry at all times.
- Do not attempt to charge the action camera using any other method or connection other than the action camera's provided charging cable.
- Do not disassemble this action camera or attempt to repair or modify it in any manner.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this action camera. If there is any damage to the action camera such as dents, punctures, tears, deformities or corrosion, stop using the action camera and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg), or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg).

### DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes.

The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the ("Materials") are the property of their respective owners and may be trademarks or registered trademarks.



Inspired by Valore Singapore

For full range of Valore products visit [www.valore.sg](http://www.valore.sg)