

# Tarsier - 1080P Mini WiFi Action Camera (VMS60)

# VALORE

Thank you for purchasing Valore Tarsier - 1080P Mini WiFi Action Camera (VMS60).

- Motion detection recording and 8-built-in night vision IR to record in total darkness
- Connect Tarsier to your mobile application via WiFi to view real-time recording

**Important:** Please read the user manual thoroughly before using your action camera.


## Specifications:

- Image sensor: GC1024
- Lens: 110°
- Resolution: 1080P FHD 1920x1080P @ 30fps  
1080P 1440x1080 @ 30fps  
720P 1280x720 @ 30fps
- Photo resolution: 12M / 10M / 8M / 5M /  
3M / 2M / 1.3M / VGA
- Input: 5V/1A
- Water-resistance: Up to 10m
- WiFi distance: Up to 10m
- Battery type: 450mAh Lithium battery
- Video format: AVI
- Photo format: JPG
- Storage: Min 8GB, Max 32GB Class 10  
microSD™ card
- Dimensions (L x W x H): 43 x 31 x 22mm
- Weight: 30g (with waterproof case 83g)

## Package Contents:

- 1080P mini WiFi action camera
- Waterproof case
- Clip
- Multi-function holder
- Switch support
- Bicycle mount
- Multi-function transfer interface
- USB cable

## UNDERSTANDING THE PRODUCT

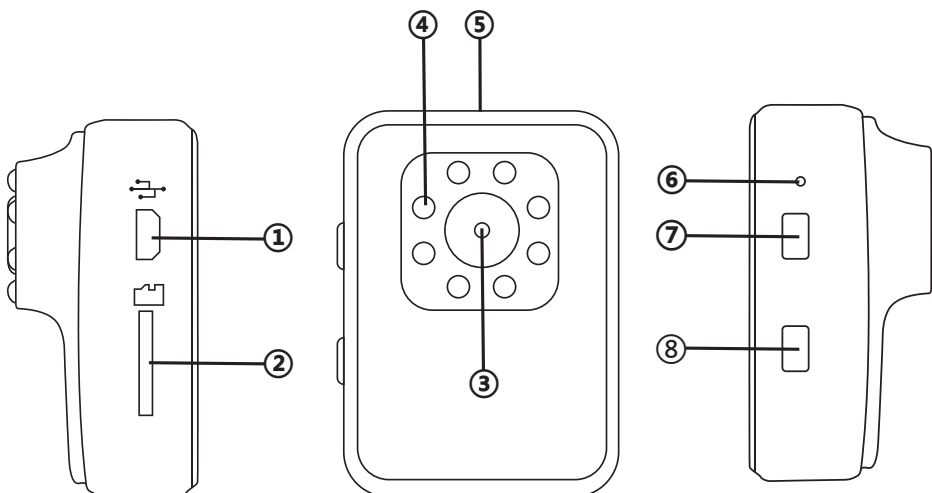

- ① Micro USB port
- ② Micro SD card slot
- ③ Lens
- ④ Night vision IR
- ⑤ Mount slot
- ⑥ LED indicator
- ⑦ Power button
- ⑧ Mode button

# Mounting

Back Clip



Multifunctional Holder



Bicycle Attachment



## Switching On/Off

- a) Long press Power button , the red and blue light will be constantly lit, the WiFi is default On.  
(Long press Mode button the blue light will off and WiFi is switched off)
- b) Long press Power button till the red and blue light to switch camera Off.

## Video

Ensure WiFi is switched off.

- a) Short press the Mode button. The red LED light will flash while recording.
- b) Press the Mode button again to stop recording. The red LED light will stop flashing.

## Night vision IR light

- a) While video recording, long press the Mode button, red LED will flash slowly.  
The IR light will be switch on.
- b) Long press the Mode button again, red LED will flash to switch the IR light off.

## Photo

Ensure WiFi is switched off.

- a) Short press the Power button. The red LED light will flash once.

## Charging

- a) Connect the USB cable to the computer of an adaptor to start charging.
- b) While charging, the red LED will be flashing.
- c) When the battery is full charged, the red LED will be constantly lit.

## Installation and use of WiFi

Before using the WiFi function, install "SPORTS DV" app from the Google Play / Apple store on your smartphone.

- a) In your smartphone's WiFi settings connect to "VMS60". Enter password "12345678" if required.
- b) In the app, you can preview the shooting screen / remote video / playback / download / delete.

## **File storage & playing**

- a) Micro SD card have to be Class 10 or above.
- b) Use a USB cable to export the videos into a computer, the action camera will prompt Mass Storage. Click on Mass Storage to play and store image.
- c) Use a card reader to access the image data on the micro SD card

Note: Make sure the action camera is turned off properly before removing the micro SD card.

## **Time setting**


When powered on, the action camera will set up a TXT file box in the Micro SD card automatically. Connect the Micro SD card to your computer. When you access the file, set up the time on the Timerest.txt as you like, (YEAR/MONTH/DAY/HOUR/MINUTE/SECOND: 20180501174726 Y), then save. When powered on again, the time will be displayed on videos.

If you do not need to display time, simply set the letter “N” instead of the word “Y”.

For example:

1: 20180501192526 Y ( display time)

2: 20180501192526 N (no display)

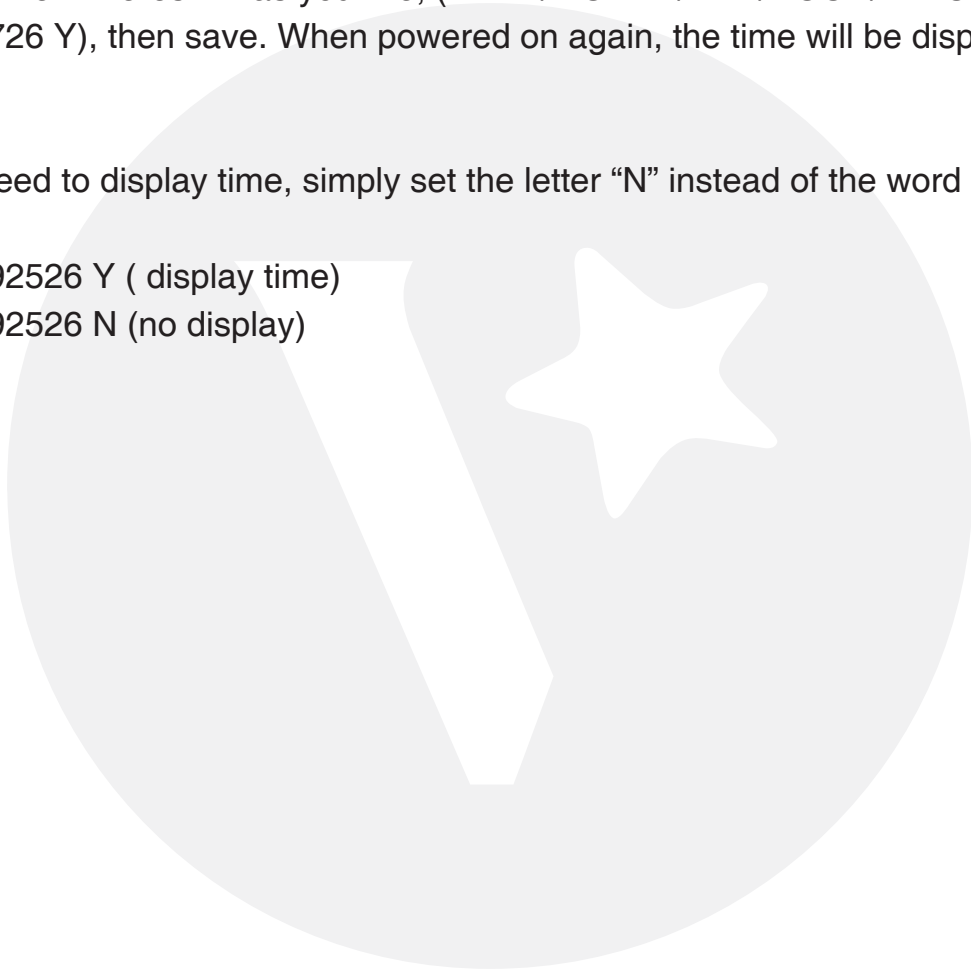

## TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at [v.info@valore.sg](mailto:v.info@valore.sg).
- For Warranty Registration, visit [www.valore.sg](http://www.valore.sg).

### Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the action camera in a high temperature environment.
- Do not place the action camera near a fire or other excessively hot environments.
- Do not expose this action camera to moisture or submerge it in liquid. Keep action camera dry at all times.
- Do not attempt to charge the action camera using any other method or connection other than the action camera's provided charging cable.
- Do not disassemble this action camera or attempt to repair or modify it in any manner.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this action camera. If there is any damage to the action camera such as dents, punctures, tears, deformities or corrosion, stop using the action camera and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg), or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg).

### DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Challenger Technologies Limited. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes.

The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the ("Materials") are the property of their respective owners and may be trademarks or registered trademarks.

Complies with  
IMDA Standards  
DA103331



Inspired by Valore Singapore

For full range of Valore products visit [www.valore.sg](http://www.valore.sg)