

Valore Power Bank Wireless Speaker (BTS-449)

VALORE

Thank you for purchasing the Valore Power Bank Wireless Speaker (BTS-449)

Designed for outdoor enthusiasts, this portable wireless speaker also doubles up as a power bank and comes with a built-in carabiner for you to clip onto your backpack or clothes on-the-go. Plus, it is certified to IPX4 international standard which guarantees effective splash resistance.

Important: Please read the user manual thoroughly before using your power bank wireless speaker.

 
Specifications:

- Battery type: Built-in Lithium-ion
- Battery capacity: 4400mAh
- Wireless range: Up to 10m
- Input: 5V/1.0A (max)
- Output: 5V/2.0A (max)
- Playback time: up to 40 hours
- Charging time: 8 hours (5V/1.0A USB adapter)
- Material: ABS plastic + iron mesh grills + silicone band
- Dimension (L x W x H): 185 x 68 x 28mm
- Weight: 270g

Package Contents:

- Power bank wireless speaker
- Mirco-USB charging cable
- Auxiliary Cable

UNDERSTANDING THE PRODUCT

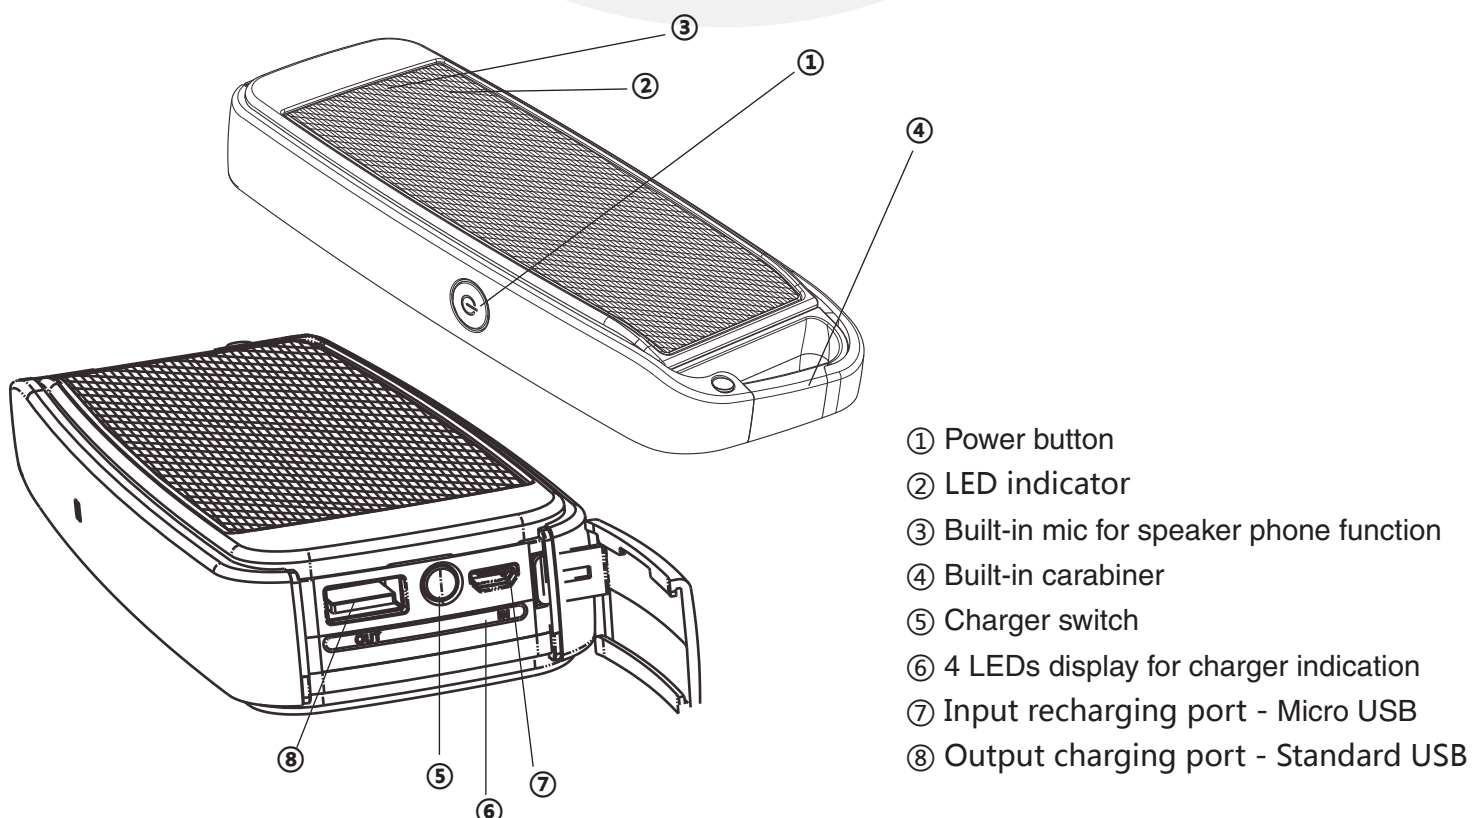


START USING THE POWER BANK WIRELESS SPEAKER

1) Charging the power bank wireless speaker

Open the rubber cover, connect the Micro-USB port with the recharge cord and its USB plug to an USB port power source. The 4 LED lights will light up and flash to indicate recharging of the power bank wireless speaker. When it is fully charge, all 4 LEDs will stop flashing and stay lit.

Noted: It take approx. 5~8 hours for every recharge. During recharging you cannot use the standard USB port for output charging at the same time.

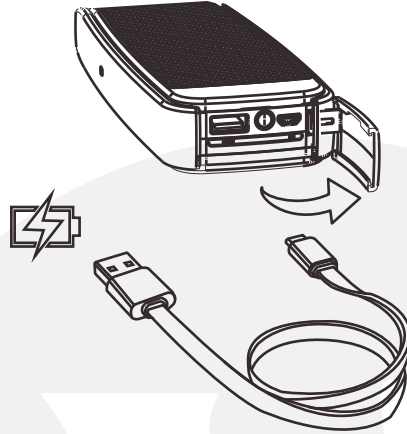

2) Checking your power bank battery level

Open the rubber cover, press the charger switch once to turn on level checking.

4 LEDs are lit - 90% - 100%

3 LEDs are lit - 60% - 90%


2 LEDs are lit - 30% - 60%

1 LED is lit and flashing - 10% - 20%

If power bank is less than 10%, it will turn off automatically.

3) Charging your device

Open the rubber cover, connect the charging cord (not provided) to the standard USB port of the power bank. Connect the other end to your smart phone device. Press the charger switch once to turn on the power bank and the output leds will lit continuously to indicate charging of your device. If the power bank do not detect output loading in approx. 30secs, it will turn off automatically. You then need to repeat the above steps to turn on the power bank again before you can charge your devices.

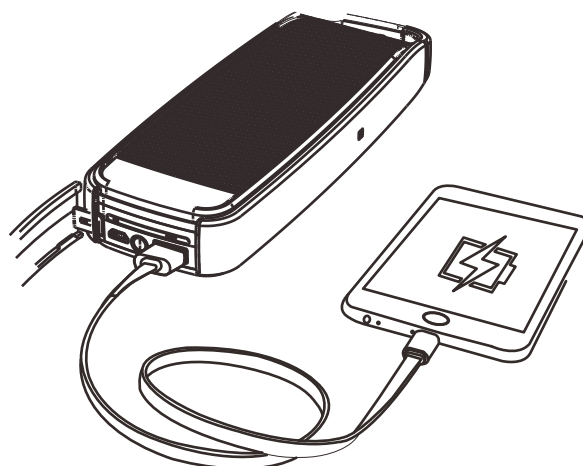

4) Pairing phone (manually) to power bank wireless speaker

- Turn on the speaker by pressing and hold for 3 seconds on the power button at the side, the blue LED is lit at the front speaker grille. You will hear a sweep tone indicates the speaker is ready. For first time using the LED will be flashing fast to show that it is now ready for pairing. Browse your smart phone bluetooth device list, select the one named 'Valore BTS449' to confirm pairing on your smart phone. You will hear a 'bloop' tone on the speakers which is sent from your phone. The speaker's blue LED will lit continuously. Pairing is successful.
- When you need to disconnect the speaker, you first switch off bluetooth function on your smart phone, the speaker's blue LED will flash slowly. You then switch off the speaker by pressing and holding onto the power button for 3-5 seconds, the pairing memory will be kept there. Next time you turn on the speaker, it will connect to your smart phone automatically when your bluetooth function is turned on less than 5m away.
- If you need to pair the power bank wireless speaker to a new device, turn off bluetooth function on your old device first. Then power on your new device's bluetooth function. Press and hold onto the power switch for 1-2 seconds until the speaker's blue LED is flashing fast and repeat steps as above.

5) Call pick function

When the power bank wireless speaker is connected to your phone with the blue LED lit continuously, whenever there is an incoming call, you can press the power button once to pick up. Press the power button once again will call.

6) Speaker - How to use/Control


- Adjust volume - Operate from your smart phone/mobile device.
- Next/Previous track - Operate from your smart phone/mobile device.
- During music playback, press the power button once to pause, press again to resume.

If battery power becomes low, there will be some beeping alert sound during playback and the speaker's LED flashes red and blue quickly. Recharge the speaker as mentioned in the above section.

Note: Music can still be played while recharging the in-built battery

You can use the AUX-3.5mm audio cable to connect smart phone or other player devices for music playback. Whenever you plug in the AUX cord, bluetooth will be disconnected. You will then need to operate from the device connected.

Note: You will need to operate the smart phone to resume music playback when you disconnect the AUX cable and use it wireless again, and operate the speaker buttons as usual.

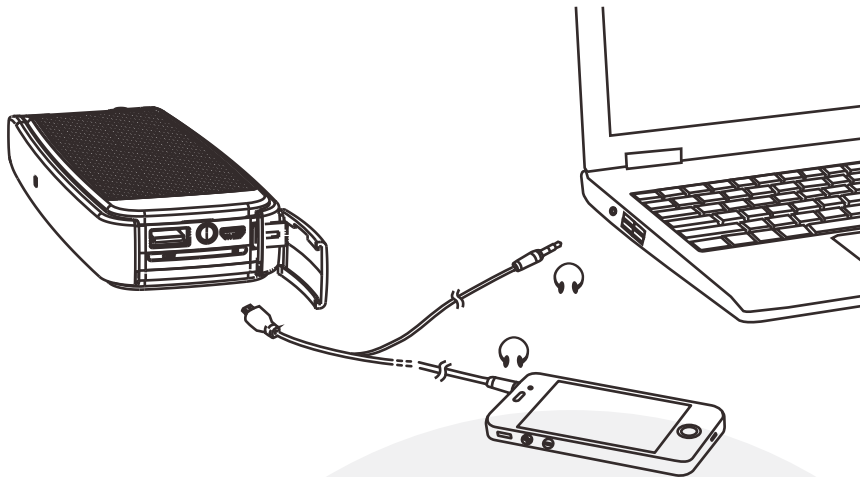

TROUBLESHOOTING

Issue 1: Speaker is unable to connect successfully to your mobile device

Problem 1: Speaker's battery is flat

Solution: Fully charge the speaker and retry connection with your mobile device.

Problem 2: Speaker not paired to your mobile device

Solution: Make sure that the speaker is successfully paired upon selecting 'Valore BTS449' in the device list.

Problem 3: Speaker and mobile device too far apart

Solution: Make sure that the speaker is within a metre range during pairing and connection.

Problem 4: Speaker is connected to other mobile device

Solution: Make sure that the speaker has already been disconnected before making a new connection with a new device.

Issue 2: Sound from the speaker is too soft or silent

Problem 1: Speaker's battery is low / flat

Solution: Fully charge the speaker and retry connection with your mobile device.

Problem 2: Speaker or mobile device's volume is too low

Solution: Turn the volume of the speaker or mobile device up to increase the volume.

Problem 3: Music track may not be audible

Solution: Make sure that the music track is of a playable format for the mobile device.

Problem 4: Speaker and mobile device might not be connected properly.

Solution: Repeat the connection step via Bluetooth/auxiliary cable again to make sure that it is connected properly and try again.

TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at v.info@valore.sg.
- For Warranty Registration, visit www.valore.sg.

Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the speaker in a high temperature environment.
- Do not place the speaker near a fire or other excessively hot environments.
- Do not expose this speaker to moisture or submerge it in liquid. Keep speaker dry at all times.
- Do not attempt to charge the speaker using any other method or connection other than the speaker's provided charging cable.
- Do not disassemble this speaker or attempt to repair or modify it in any manner.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this speaker. If there is any damage to the speaker such as dents, punctures, tears, deformities or corrosion, stop using the speaker and contact us immediately via email at v.info@valore.sg, or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at v.info@valore.sg.

DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes.

The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the ("Materials") are the property of their respective owners and may be trademarks or registered trademarks.

Complies with
IDA standards
DA 103331



Inspired by Valore Singapore

For full range of Valore products visit www.valore.sg